



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		63828	HOUSING, FLYWHEEL	1	SERIAL 00000000-04929029	
1		77383	HOUSING, FLYWHEEL	1	SERIAL 04929030-09999999	
2		63833	COVER, FLYWHEEL HOUSING	1		
3	10	20031	SCREW, COVER TO FLYWHEEL	4		
4	13	26992	LOCKWASHER, COVER SCREW	4		
5	10	34353	SCREW, FLYWHEEL HOUSING T	2		
5	10	48424	SCREW, FLYWHEEL HOUSING T	2		
5A	13	37459	LOCKWASHER, FLYWHEEL HOU	5		
5B	16	64066	STUD, FLYWHEEL HOUSING TO	1	SERIAL 04929030-09999999	
5C	11	32219	NUT, FLYWHEEL HOUSING TO E	1	SERIAL 04929030-09999999	
6	10	63826	SCREW, FLYWHEEL HOUSING T	2		
6A	12	20572	WASHER, FLYWHEEL HOUSING	1		
7		63832	COOLER, OIL (9")	1		
7		63832	COOLER, OIL (12") - V-DRIVE ONL	1		
8		49748A	BRACKET ASSEMBLY, OIL COOLE	1		
9	54	32781	CLAMP, OIL COOLER TO BRACKE	2		
10	10	27165	SCREW, OIL COOLER BRACKET	1		
11	11	52412	NUT, OIL COOLER BRACKET SCF	1		
12		49735	BRACKET, OIL COOLER	1		
13	23	36365	SPACER, OIL COOLER BRACKET	2		