



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	735	6370	PISTON AND PISTON PIN ASSEM	AR		
1	735	6371	PISTON AND PISTON PIN ASSEM	AR		
2	39	65153	RING, PISTON - 8SETS (STANDA	8		
2	39	67126	RING, PISTON - 8 SETS (.030 O.S	AR		
3	23	85694	BEARING UNIT, CRANKSHAFT (S	4		
3	23	85695	BEARING UNIT, CRANKSHAFT M	AR		
3	23	85696	BEARING UNIT, CRANKSHAFT M	AR		
3	23	85697	BEARING UNIT, CRANKSHAFT M	AR		
4	23	85698	BEARING UNIT, CRANKSHAFT M	1		
4	23	85699	BEARING UNIT, CRANKSHAFT M	AR		
4	23	85700	BEARING UNIT, CRANKSHAFT M	AR		
4	23	52216	BEARING UNIT, CRANKSHAFT M	AR		
6	26	58203	OIL SEAL, REAR (2-PIECE)	2		4,9
7	222	6355	FLYWHEEL (12-3/4" DIA.)	1		
7	230	9425	FLYWHEEL (14" DIA.)	1		9
7	222	9520	FLYWHEEL (14" DIA.)	1		8
8		76850A 2	ENGINE COUPLING ASSEMBLY	1	EARLY MODELS	
9	16	98532A 1	STUD, COUPLING TO FLYWHEEL	6	EARLY MODELS	
10	12	35935	WASHER< COUPLING STUD	6	EARLY MODELS	
11	11	98533	NUT, COUPLING STUD	6	EARLY MODELS	
12		12632A 4	COUPLING ASSEMBLY	1	LATER MODELS	
13		26901	RUBBER BUMPER	3	LATER MODELS	
14	10	14883	SCREW, COUPLING	3	LATER MODELS	
15	12	13510	WASHER, COUPLING SCREW	3	LATER MODELS	
16	10	49845	SCREW, FLYWHEEL TO CRANKS	6	LATER MODELS	
17	614	8164	CONNECTING ROD ASSEMBLY	8		
18	10	85802	BOLT, CONNECTING ROD CAP	16		
19	11	37493	NUT, CONNECTING ROD CAP BC	16		
20	23	85701	BEARING SET (PAIR), CONNECTI	8		
20	23	85702	BEARING UNIT (PAIR), CONNECT	AR		
20	23	85703	BEARING UNIT (PAIR), CONNECT	AR		
20	23	85704	BEARING UNIT (PAIR), CONNECT	AR		
20	23	85705	BEARING UNIT (PAIR), CONNECT	AR		
21	429	6369	CRANKSHAFT	1		9
21	429	9521	CRANKSHAFT	1		8
22	28	34466	KEY, CRANKSHAFT PULLEY AND	2		