



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		72646	INTAKE MANIFOLD	1		
2	10	11976	BOLT, INTAKE MANIFOLD (1-1/8")	9		
2		N.S.S.	BOLT, INTAKE MANIFOLD (1-1/2")	3		
3	12	49112	WASHER, INTAKE MANIFOLD BC	3		
4	54	47512	EYE, LIFTING	1		
5	10	34354	SCREW, LIFTING EYE	2		
6		N.S.S.	STUD, GUARD TO INTAKE MANIFOLD	4		
7		72647	GUARD, INTAKE MANIFOLD	1		
8	27	72637	GASKET SET, INTAKE MANIFOLD	1		
9		60658	WATER PUMP ASSEMBLY	1		
10	27	34897	GASKET, WATER PUMP MOUNT	2		
11	10	32132	SCREW, WATER PUMP TO CYLINDER	2		
11	10	47688	SCREW, WATER PUMP TO CYLINDER	1		
11	10	52200	SCREW, WATER PUMP TO CYLINDER	1		
12		42799	PULLEY, WATER PUMP	1		
13	10	47277	SCREW, PULLEY TO WATER PUMP	4		
14	13	39107	LOCKWASHER, WATER PUMP PULLEY	4		
15		75420	BALANCER, HARMONIC-CRANKS	1		
16		33863	PULLEY, HARMONIC BALANCER	1		
17	10	72626	BOLT, PULLEY AND HARMONIC BALANCER	1		
18	13	39131	LOCKWASHER, PULLEY AND HARMONIC BALANCER	1		
19	12	35332	WASHER, PULLEY AND HARMONIC BALANCER	1		
20	10	34352	BOLT, PULLEY (7/8")	3		
21	13	35048	LOCKWASHER, PULLEY BOLT	3		
22	57	49213A	BELT, ALTERNATOR DRIVE (44")	1		
23	841	8161	CYLINDER BLOCK ASSEMBLY (SI)	1		
24		35365	SUPPORT, SPARK PLUG LEAD WIRE	2		
25	10	35366	SCREW, LEADWIRE SUPPORT (FRONT)	2		
26		60660A	COVER ASSEMBLY, CRANKSHAFT	1		
26		13613	COVER ASSEMBLY, CRANKCASE	1		
27	26	97335	OIL SEAL, CRANKCASE FRONT	1		
28	27	34895	GASKET, CRANKCASE FRONT END	1		
26		14249A	COVER, CRANKCASE FRONT (L.H.)	1		
27	26	97335	OIL SEAL, COVER	1		
28	27	14250	GASKET, COVER	1		
29	10	35366	SCREW, COVER	10		
30		14239	RETAINER, OIL SEAL (REAR) L.H.	1		
31	26	14240	OIL SEAL, CRANKSHAFT (REAR) L.H.	1		
30		15122	RETAINER, OIL SEAL (REAR) R.F.	1		
31	26	15123	OIL SEAL, CRANKSHAFT (REAR) R.F.	1		
32	27	14241	GASKET, OIL SEAL RETAINER	1		