



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	76965A 3	STARTER, L.H. ROTATION (DEL	1		
1	50	79604A 3	STARTER, R.H. ROTATION (DEL	1		
2	10	47462	SCREW, STARTER MOTOR (1-1/	2		
3	13	32993	LOCKWASHER, STARTER MOTO	2		
4	11	32219	NUT, STARTER TERMINAL (3/8-	1		
5	85	79695	BOOT, INSULATOR-STARTER TE	1		
6	13	26995	LOCKWASHER, STARTER TERMI	1		
7	11	26419	NUT, STARTER TERMINAL (#8-3	1		
8		92497A 3	ALTERNATOR (55 AMP)	1		
9	13	26996	LOCKWASHER, ALTERNATOR TI	1		
10	11	79989	NUT, ALTERNATOR TERMINAL (1		
11	13	21272	LOCKWASHER, ALTERNATOR TI	1		
12	11	64015	NUT, ALTERNATOR TERMINAL (1		
13		85013	BRACE, ALTERNATOR ADJUSTI	1		
14	10	26487	SCREW, ALTERNATOR BRACE (1		
15	13	35048	LOCKWASHER, ALTERNATOR BI	1		
16	12	34714	WASHER, ALTERNATOR BRACE	1		
17	10	74824	SCREW, ALTERNATOR BRACE (1		
18	13	39107	LOCKWASHER, ALTERNATOR BI	1		
19	12	26168	WASHER, ALTERNATOR BRACE	1		
20	23	90523	SPACER, ALTERNATOR BRACE	1		
21		57908 11	TUBING, ALTERNATOR LEADS	2		
22	12	96457	WASHER, ALTERNATOR TERMI	1		
23		93175T	BRACKET, ALTERNATOR	1		
24	10	37612	SCREW, ALTERNATOR BRACKE	3		
25	13	35048	LOCKWASHER, ALTERNATOR BI	3		
26	10	48308	SCREW, ALTERNATOR (3-3/4")	1		
27	12	20553	WASHER, ALTERNATOR BRACK	2		
28	23	33186	BUSHING, ALTERNATOR BRACK	1		
29	11	23161	NUT, ALTERNATOR BRACKET SI	1		
30	88	79023A91	FUSE ASSEMBLY (90 AMP)	1	NOT USED ON LATER ENGINES	
31	12	96457	WASHER, FUSE TERMINAL	1	NOT USED ON LATER ENGINES	
32	13	26992	LOCKWASHER, FUSE TERMINAL	1	NOT USED ON LATER ENGINES	
33	11	21825	NUT, FUSE TERMINAL	1	NOT USED ON LATER ENGINES	