



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	50	76965A 3	STARTER, L.H. ROTATION (DELCO)	1		
-	50	79604A 3	STARTER, R.H. ROTATION (DELCO)	1		
1		79206	HOUSING, DRIVE END	1		
2	23	33369	BUSHING, DRIVE END HOUS	1		
3		33292	COLLAR, THRUST	1		
4	53	33290	RING, RETAINING-PINION STO	1		
5		33291	COLLAR, PINION STOP 1	1		
6		68608	DRIVE ASSEMBLY, CLUTCH (L.	1		
6		68609	DRIVE ASSEMBLY, CLUTCH (R.	1		
7		79396	PLATE, BEARING	1		
8	23	71694	BUSHING, BEARING PLATE	1		
9	12	68614	WASHER, BEARING PLATE	1		
10	10	75659	SCREW, BEARING PLATE	2		
11		68606	ARMATURE (L.H. ROTATION)	1		
11		68607	ARMATURE (R.H. ROTATION)	1		
12		N.S.S.	SHOE, POLE-FIELD COIL (DELCO)	4		
13		N.S.S.	SCREW, POLE SHOE TO FIELD	4		
14		N.S.S.	GROMMET, FIELD COIL-FIELD F	1		
15		N.S.S.	FIELD COIL (L.H. ROTATION) (D	1		
15		75664	FIELD COIL (R.H. ROTATION)	1		
16	12	33258	WASHER, LEATHER-COMMUTAT	1		
17		79211	FRAME, COMMUTATOR END-LI	1		
18		N.S.S.	BOLT, THRU (DELCO REMY #1)	1		
18		N.S.S.	BOLT, THRU (DELCO REMY #1)	1		
19		33284	HOLDER, INSULATED-FIELD FF	2		
20		33283	HOLDER, FIELD FRAME BRUSH	2		
21		33270	BRUSH, FIELD FRAME	4		
22		N.S.S.	SCREW, BRUSH LEAD (DELCO)	2		
22		N.S.S.	SCREW, BRUSH LEAD (DELCO)	2		
23		33294	SUPPORT PACKAGE, GROUND	2		
24	24	33285	SPRING, FIELD FRAME BRUSH	4		
25		N.S.S.	PIN, DOWEL-FIELD FRAME (DE	1		
26		33297	LEVER, SHIFT	1		
27		N.S.S.	STUD, SHIFT LEVER (DELCO R	1		
28	12	68615	WASHER, SHIFT LEVER STUD	1		
29	11	26484	NUT, SHIFT LEVER STUD	1		
30		33317	PLUNGER, SHIFT LEVER	1		
31	17	79207	PIN, PLUNGER TO SHIFT LEVE	1		
32	24	46889	SPRING, PLUNGER RETURN	1		
33		N.S.S.	SCREW, SOLENOID SWITCH (C	2		
34		22261	SOLENOID SWITCH ASSEMBLY	1		