



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		66417	BRACKET, TRANSMISSION (REA	2		
1		52158A20	BRACKET, TRANSMISSION (REA	2		
2	10	37269	SCREW, BRACKET (2")	4		
2	10	47462	SCREW, BRACKET (1-1/4") (HOR	4		
3	13	32993	LOCKWASHER, BRACKET SCREW	4		
4	10	57357	SCREW, CLAMPING (2-1/4")	2		
4	10	47654	SCREW, CLAMPING (2-3/4") (HOF	2		
5	54	47528	CLAMP, CLAMPING SCREW (HOF	4		
6	13	32993	LOCKWASHER, CLAMPING SCRE	1		
7	11	29553	NUT, CLAMPING SCREW	2		
8		71128A 2	BRACKET, MOUNTING - ENGINE	2		
9	10	68101	SCREW, MOUNTING BRACKET (	5		
9	10	34354	SCREW, MOUNTING BRACKET (	1		
10	13	35048	LOCKWASHER, MOUNTING BRA	6		
11	10	37269	SCREW, CLAMPING-MOUNTING	2		
12	13	32993	LOCKWASHER, CLAMPING SCRE	2		
13	11	29553	NUT, CLAMPING SCREW	2		
14		66166A 4	TRUNNION, ADJUSTING-MOUNT	4		
15	13	68102	LOCKWASHER, MOUNTING BRA	4		
16		66284A 2	BASE, ENGINE MOUNT	4		
17	11	20739	NUT, JAM-ENGINE MOUNT BAS	8		
18	14	66658	TAB WASHER, BASE NUT	4		