



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	84	93947A 6	WIRING HARNESS	1	
2		26079	PLATE, WIRING HARNESS TO M	1	
3	10	34696	SCREW, WIRING HARNESS PLA	4	
4		98493A 2	BRACKET, MOUNTING	1	
5	10	54615	SCREW, MOUNTING BRACKET (F	3	
6	13	26992	LOCKWASHER, MOUNTING BRA	3	
7	390	7804A 3	IGNITION AMPLIFIER	1	
8	10	69093	SCREW, IGNITION AMPLIFIER (1	3	
9	13	26992	LOCKWASHER, IGNITION AMPLII	3	
10	23	92152	SPACER, IGNITON AMPLIFIER SC	3	
11		97258A 1	WATER TEMPERATURE SENDEL	1	
11		49734A 1	WATER TEMPERATURE SENDEL	1	
12	13	26996	LOCKWASHER, WATER TERM	1	
13	11	68219	NUT, WATER TEMPERATURE	1	
14		90806	OIL PRESSURE SENDER	1	
14		37293	OIL PRESSURE SENDER (DUAL)	1	
15	13	26996	LOCKWASHER, OIL PRESSURE	1	
16	11	68219	NUT, OIL PRESSURE SENDER	1	
17	22	46932	ELBOW, OIL PRESSURE SENDEL	1	
18	22	42554	NIPPLE, OIL PRESSURE SENDEL	1	
19		41170A 2	BRACKET, MOUNTING	1	
20	10	98260	SCREW, MOUNTING BRACKET (F	1	
20	10	37612	SCREW, MOUNTING BRACKET (F	1	
21	13	35048	LOCKWASHER, MOUNTING BRA	1	
22	23	91034	SPACER, MOUNTING SCREW OF	2	
23	10	35787	SCREW, MOUNTING BRACKET (F	1	
24	16	24585 1	STUD, MOUNTING BRACKET (ST	1	
25	11	24883	NUT, MOUNTING BRACKET STU	1	
26	13	35048	LOCKWASHER, MOUNTING BRA	1	
27	12	20086	WASHER, MOUNTING BRACKET	1	
28	23	88275	SPACER, MOUNTING BRACKET (F	1	
29	88	11178	CIRCUIT BREAKER (50 AMP)	AR	
29	88	93582	CIRCUIT BREAKER (60 AMP)	AR	
30	13	26996	LOCKWASHER, CIRCUIT BREAK	2	
31	11	27164	NUT, CIRCUIT BREAKER TERM	2	
32	10	45862	SCREW, CIRCUIT BREAKER (7/8	2	
33	10	71405	SCREW, INSULATOR (7/16")	3	
34	12	30164	WASHER, CIRCUIT BREAKER SC	3	
35	11	46438	NUT, INSULATOR SCREW	3	
36	85	96819	INSULATOR, CIRCUIT BREAKER	1	
37	54	78945	CLAMP BRACKET SCREW	1	