



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1623	5356A 3	GEAR HOUSING ASSEMBLY, CO	1		
1	1623	5356A 4	GEAR HOUSE ASSEMBLY	1		
2	17	37972	PIN, SHAFT CRANK - GEAR H	1		
3	16	46911	STUD, GEAR HOUSING TO D	1		
4	16	56298	STUD, GEAR HOUSING TO D	2		
5	26	45577	SEAL, GEAR HOUSING	1		
6	16	56297	STUD, WATER PUMP BASE A	1		
7	16	69501	STUD, WATER PUMP BASE A	2		
8	17	46912	PIN, DOWEL - GEAR HOUSIN	2		
9	31	35934	BEARING, ROLLER - DRIVE S	1		
10		66884	INSERT, WATER PICKUP (POR	1		
10		66885	INSERT, WATER PICKUP (ST.	1		
11	10	76156	SCREW, INSERT TO GEAR H	1		
12	11	45812	NUT, INSERT TO GEAR HOU:	1		
13	45	55757A 1	DRIVE SHAFT ASSEMBLY	1		
14	17	30545	PIN, DRIVE SHAFT	1		
15	24	34576	SPRING, COMPRESSION - DF	1		
16	25	30613	"O" RING, UPPER - DRIVE SHA	1		
17	43	61027	GEAR, PINION - DRIVE SHAFT	1		
18	11	35921	NUT, PINION GEAR TO DRIVE	1		
19	15	57007A 1	SHIM, DRIVE SHAFT BEARING	AR		
20	31	53079A 1	TAPERED ROLLER BEARING A	1		
21	27	33146	GASKET, WATER PUMP BASE	1		
22	25	33145	"O" RING, WATER PUMP BASE	1		
23	46	57234A 1	WATER PUMP BASE ASSEMBL	1		
24	26	33144	OIL SEAL, WATER PUMP BAS	1		
25	26	31507	OIL SEAL, WATER PUMP BAS	1		
26	17	35973	DOWEL PIN, WATER PUMP E	2		
27	27	32433	GASKET, LOWER - WATER PUI	1		
28		32435	PLATE, FACE - WATER PUMP E	1		
29	27	32434	GASKET, UPPER - FACE PLATE	1		
30	46	64141A 1	WATER PUMP BODY ASSEMBL	1		
31		48752	INSERT, WATER PUMP BOD	1		
32	26	38970	SEAL, RUBBER - WATER INLI	1		
33	47	65960	IMPELLER, WATER PUMP	1		
34	28	56654	PIN, IMPELLER DRIVE	1		
35	10	30720	SCREW, WATER PUMP BODY TC	1		
36	12	36001	WASHER, WATER PUMP BOD	1		
37	11	35888	NUT, WATER PUMP BODY SHE	2		
38	11	45592	NUT, WATER PUMP BODY STL	1		
39	12	28245	WASHER, WATER PUMP BOD	2		