



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	32	58432A 2	TUBING, HYDRAULIC PUMP TO	1	- WITHOUT GIMBAL TRIM SENC	
2	32	52951A 1	TUBING, TRIM SENDER TO REV	1	- WITHOUT GIMBAL TRIM SENC	
3	32	58432A 2	TUBING, HYDRAULIC PUMP TO	1		
3A	22	49718	NUT, COMPRESSION - HYDRAUL	2		
3B	54	38863	CLAMP, HOSE	1		
4	32	59841	HOSE, HYDRAULIC - CONNECTO	1		
5	32	59842	HOSE, HYDRAULIC - CONNECTO	1		
6	32	68676	HOSE, HYDRAULIC - CONNECTO	4		
7		45706A12	TRIM CYLINDER ASSEMBLY, COI	2	- SEE B9 FOR BREAKDOWN OF	
-		45522A 3	PIVOT END REPAIR KIT, TRIM	2	- SEE B9 FOR BREAKDOWN OF	
-		77442A 1	OUTER TUBE REPAIR KIT, TRI	2	- SEE B9 FOR BREAKDOWN OF	
-	25	60324A2	"O" RING, REPAIR KIT, TRIM C	2	- SEE B9 FOR BREAKDOWN OF	
8	17	45735	PIN, FRONT ANCHOR - TRIM CYL	1		
9	12	45737	WASHER, FRONT ANCHOR PIN	2		
10	23	61290	BUSHING, RUBBER - FRONT AN	4		
11	24	46312	SPRING, FRONT ANCHOR PIN	2		
12	12	46765	WASHER, FRONT ANCHOR PIN	2		
13	11	34932	NUT, FRONT ANCHOR PIN	2		
14	17	45738	PIN, REAR ANCHOR - TRIM CYLI	1		
15	12	45737	WASHER, REAR ANCHOR PIN	2		
16	23	61290	BUSHING, RUBBER - REAR ANCH	4		
17	24	46312	SPRING, REAR ANCHOR PIN	2		
18	12	46765	WASHER, REAR ANCHOR PIN	2		
19	11	34932	NUT, REAR ANCHOR PIN	2		