



**INBOARD**

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		66417	BRACKET, MOUNTING - TRANSMI	2		
2	10	37269	SCREW, BRACKET TO TRANSMI	4		
3	13	32993	LOCKWASHER, BRACKET SCRE	4		
4	10	57357	SCREW, CLAMPING - MOUNTING	2		
5	13	32993	LOCKWASHER, CLAMPING SCRE	2		
6	11	29553	NUT, CLAMPING SCREW	2		
7		66169	BRACKET, MOUNTING - ENGINE	2		
8	16	65737	STUD, FRONT MOUNTING BRAC	3		
8	16	65743	STUD, FRONT MOUNTING BRAC	1		
9	13	32993	LOCKWASHER, FRONT MOUNTII	2		
10	11	34933	NUT, FRONT MOUNTING BRACK	4		
11	10	68743	SCREW, ENGINE LOCATING (1 1	2		
12	11	22024	NUT, ENGINE LOCATING SCREW	2		
13	10	37269	SCREW, CLAMPING - MOUNTING	2		
14	13	32993	LOCKWASHER, CLAMPING SCRI	2		
15	11	29553	NUT, CLAMPING SCREW	2		
16		66166	TRUNNION, ADJUSTING - MOUN	4		
17	13	68102	LOCKWASHER, MOUNTING BRA	4		
18		66284	BASE, ENGINE MOUNT	4		
19	11	20739	NUT, JAM - ENGINE MOUNT BA	8		
20	14	66658	TAB WASHER, BASE NUT	4		