



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	64635	WIRING HARNESS	1		
2		26079	PLATE, WIRING HARNESS TO M	1		
3	10	46718	SCREW, WIRING HARNESS PLA	4		
4		64709	BRACKET, MOUNTING-ELECTRIC	1		
5	54	61001	CLIP, WIRING HARNESS TO ROC	1		
6		25661	STARTER SOLENOID	1		
7	10	28063	SCREW, STARTER SOLENOID TI	2		
8	13	26992	LOCKWASHER, STARTER SOLEI	2		
9	13	26996	LOCKWASHER, STARTER SOLEI	2		
10	11	20645	NUT, STARTER SOLENOID TERM	2		
11	13	26993	LOCKWASHER, STARTER SOLEI	2		
12	11	20083	NUT, STARTER SOLENOID TERM	2		
13	88	65093	CIRCUIT BREAKER	1		
13	13	26996	LOCKWASHER, CIRCUIT BREA	1		
13	11	20645	NUT, CIRCUIT BREAKER TERM	1		
14	10	47618	SCREW, CIRCUIT BREAKER TO E	2		
15	25	61999	GROMMET, CIRCUIT BREAKER E	4		
16	23	61998	SPACER, CIRCUIT BREAKER GRI	2		
17	12	47960	WASHER, CIRCUIT BREAKER SC	4		
18	11	46438	NUT, CIRCUIT BREAKER SCREW	2		