



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		47753A 3	TRANSMISSION ASSEMBLY	1		
2	22	47629	ELBOW, TRANSMISSION TO OI	1		
3	23	36159	BUSHING, REDUCING - TRANS	1		
4	22	47631	ELBOW, TRANSMISSION TO OI	1		
5		47339A 1	ENGINE COUPLING ASSEMBLY	1		
6	19	47463	PLUG, EXPANSION - ENGINE	1		
7	53	47469	RING, SNAP - BALL BEARING	1		
8	23	47471	BEARING, ENGINE COUPLING	1		
9	24	47755	SPRING, GUIDE - ENGINE CO	1		
10	30	48756	BALL BEARING, ENGINE COU	1		
11		47333A 1	HOUSING ASSEMBLY, BEARIN	1		
12	25	47756	"O" RING, BEARING SUPPOR	1		
13	26	47465	OIL SEAL, BEARING SUPPOR	1		
14	31	47468	ROLLER BEARING, BEARING	1		
15	27	47903	GASKET, BEARING SUPPORT F	1		
16	10	47462	SCREW, BEARING SUPPORT F	8		
17	13	32993	LOCKWASHER, BEARING SUPP	8		
18		48461	ADAPTOR, OIL LEVEL GAUGE TL	1		
19	25	48462	"O" RING, OIL LEVER TUBE ADA	1		
20		48463	TUBE, OIL LEVEL GAUGE	1		
21		48464	GAUGE, OIL LEVEL	1		
22	25	35276	"O" RING, OIL LEVEL GAUGE	1		
23		48466	BRACKET, MOUNTING - OIL LEV	1		
24	10	34290	SCREW, MOUNTING BRACKET T	2		
25	13	26992	LOCKWASHER, MOUNTING BRA	2		
26	45	48465	CLAMP, OIL LEVEL TUBBE TO M	1		
27	10	20776	SCREW, OIL LEVEL GAUGE TUBI	1		
28	13	26992	LOCKWASHER, OIL LEVEL GAUC	1		
29	11	21825	NUT, OIL LEVEL GAUGE TUBE CI	1		
30		47338A 1	BRACKET ASSEMBLY, TRANSMI	1		
31		35852	MOUNT, TRANSMISSION MOUN	1		
32	10	38197	SCREW, MOUNT BRACKET TO T	1		
33	10	47462	SCREW, MOUNT TO TRANSMIS	1		
34	13	32993	LOCKWASHER, MOUNT BRACKE	2		
35	32	47516 4	HOSE, TRANSMISSION TO OIL C	1		
36	22	47630	ELBOW, TRANSMISSION HOSE	1		
37		47472	LEVEL, SHIFT - TRANSMISSION	1		
38	12	20722	WASHER, SHIFT LEVEL TO TRAI	1		
39	13	26993	LOCKWASHER, SHIFT LEVEL TO	1		
40	11	20083	NUT, SHIFT LEVEL TO TRANSMI	1		
41	10	47724	SCREW, TRANSMISSION TO EN	1		