



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1347	6492A 1	CARBURETOR ASSEMBLY, COMI	1		
1	1397	6641	AIR HORN ASSEMBLY	1		
2	1397	5640	LEVER, AIR VALVE LOCKOUT	1		
2A			ROLL PIN, LOCKOUT LEVER	1		0
3	1397	3313	HOLDER KIT, SECONDARY ME	1		
4	1397	5974	METERING ROD, SECONDARY	2		
5	10	48137	SCREW, AIR HORN TO FLOAT	2		
6	10	34370	SCREW, AIR HORN TO FLOAT	5		
7	10	48395	SCREW, AIR HORN TO FLOAT	2		
8	1397	5638	LEVER, ACTUATING - PUMP	1		
9			ROLL PIN, HINGE - PUMP LEVE	1		0
10			PUMP ASSEMBLY	1		0
11			SPRING, PUMP RETURN	1		0
12			NEEDLE AND SEAT ASSEMBLY	1		0
13			GASKET, NEEDLE AND SEAT	1		0,3
14			PULL CLIP, FLOAT NEEDLE	1		0
15			GASKET, AIR HORN	1		0,3
16			METERING ROD, PRIMARY	2		0
17			JET, PRIMARY	2		0
18	1397	4326	CHOKE SHAFT AND LEVER AS:	1		
19	1397	4587	VALVE, CHOKE - CHOKE SHAF	1		
20	10	48139	SCREW, CHOKE VALVE TO CHI	2		
21	1397	3327	FLOAT ASSEMBLY	1		
22	17	48140	PIN, HINGE - FLOAT	1		
23	1397	3323	LEVER, INTERMEDIATE CHOKI	1		
24	1397	3332	BAFFLE, FLOAT BOWL	1		
25	1397	3324	ROD, CHOKE	1		
26			CLIP, CHOKE ROD	1		0
27	1397	3318	ROD, VACUUM CONTROL	1		
28			CLIP, VACUUM CONTROL ROD	1		0
29	1397	3339	BRACKET ASSEMBLY, VACUUM	1		
30	10	49138	SCREW, VACUUM CONTROL B	2		
31	1397	3317	CONTROL ASSEMBLY, VACUUM	1		
32	1397	3320	HOSE, VACUUM	1		
33	1397	5641	POWER PISTON ASSEMBLY	1		
34	24	48142	SPRING, METERING ROD - PRI	1		
35	1397	3329	RETAINER, POWER PISTON	1		
36	1397	3326	RETAINER, PUMP DISCHARGE	1		
37			BALL, PUMP DISCHARGE	1		0
38	24	48141	SPRING, POWER PISTON	1		
39	1397	3321	INSERT, FLOAT BOWL	1		