



| Parts List | | | | | | |
|------------|-------|----------|------------------------------|-----|---------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | | 47753A 3 | TRANSMISSION ASSEMBLY | 1 | | |
| 2 | 22 | 47629 | ELBOW, TRANSMISSION TO OI | 1 | | |
| 3 | 23 | 36159 | BUSHING, REDUCING - TRANS | 1 | | |
| 4 | 22 | 47631 | ELBOW, TRANSMISSION TO OI | 1 | | |
| 5 | | 47339A 1 | ENGINE COUPLING ASSEMBLY | 1 | | |
| 6 | 19 | 47463 | PLUG, EXPANSION - ENGINE | 1 | | |
| 7 | 53 | 47469 | RING, SNAP - BALL BEARING | 1 | | |
| 8 | 23 | 47471 | BEARING, ENGINE COUPLING | 1 | | |
| 9 | 24 | 47755 | SPRING, GUIDE - ENGINE CO | 1 | | |
| 10 | 30 | 48756 | BALL BEARING, ENGINE COU | 1 | | |
| 11 | | 47333A 1 | HOUSING ASSEMBLY, BEARIN | 1 | | |
| 12 | 25 | 47756 | "O" RING, BEARING SUPPOR | 1 | | |
| 13 | 26 | 47465 | OIL SEAL, BEARING SUPPOR | 1 | | |
| 14 | 31 | 47468 | ROLLER BEARING, BEARING | 1 | | |
| 15 | 27 | 47903 | GASKET, BEARING SUPPORT F | 1 | | |
| 16 | 10 | 47462 | SCREW, BEARING SUPPORT F | 8 | | |
| 17 | 13 | 32993 | LOCKWASHER, BEARING SUPP | 8 | | |
| 18 | | 48461 | ADAPTOR, OIL LEVEL GAUGE TL | 1 | | |
| 19 | 25 | 48462 | "O" RING, OIL LEVER TUBE ADA | 1 | | |
| 20 | | 48463 | TUBE, OIL LEVEL GAUGE | 1 | | |
| 21 | | 48464 | GAUGE, OIL LEVEL | 1 | | |
| 22 | 25 | 35276 | "O" RING, OIL LEVEL GAUGE | 1 | | |
| 23 | | 48466 | BRACKET, MOUNTING - OIL LEV | 1 | | |
| 24 | 10 | 34290 | SCREW, MOUNTING BRACKET T | 2 | | |
| 25 | 13 | 26992 | LOCKWASHER, MOUNTING BRA | 2 | | |
| 26 | 45 | 48465 | CLAMP, OIL LEVEL TUBBE TO M | 1 | | |
| 27 | 10 | 20776 | SCREW, OIL LEVEL GAUGE TUBI | 1 | | |
| 28 | 13 | 26992 | LOCKWASHER, OIL LEVEL GAUC | 1 | | |
| 29 | 11 | 21825 | NUT, OIL LEVEL GAUGE TUBE CI | 1 | | |
| 30 | | 47338A 1 | BRACKET ASSEMBLY, TRANSMI | 1 | | |
| 31 | | 35852 | MOUNT, TRANSMISSION MOUN | 1 | | |
| 32 | 10 | 38197 | SCREW, MOUNT BRACKET TO T | 1 | | |
| 33 | 10 | 47462 | SCREW, MOUNT TO TRANSMIS | 1 | | |
| 34 | 13 | 32993 | LOCKWASHER, MOUNT BRACKE | 2 | | |
| 35 | 32 | 47516 4 | HOSE, TRANSMISSION TO OIL C | 1 | | |
| 36 | 22 | 47630 | ELBOW, TRANSMISSION HOSE | 1 | | |
| 37 | | 47472 | LEVEL, SHIFT - TRANSMISSION | 1 | | |
| 38 | 12 | 20722 | WASHER, SHIFT LEVEL TO TRAI | 1 | | |
| 39 | 13 | 26993 | LOCKWASHER, SHIFT LEVEL TO | 1 | | |
| 40 | 11 | 20083 | NUT, SHIFT LEVEL TO TRANSMI | 1 | | |
| 41 | 10 | 47724 | SCREW, TRANSMISSION TO EN | 1 | | |