



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	57	57298	"V" BELT, HYDRAULIC PUMP DRI	1			
2		56331A 1	PULLEY ASSEMBLY, CRANKSHF	1			
3	10	52693	SCREW, PULLEY TO CRANKSH	3			
4	13	35048	LOCKWASHER, PULLEY SCREW	3			
5	12	20553	WASHER, PULLEY SCREW	3			
6		49181	PULLEY, HYDRAULIC PUMP	1			
7	12	21901	WASHER, PULLEY TO HYDRAUL	1			
8	11	25899	NUT, PULLEY TO HYDRAULIC PL	1			
9		56313	BRACKET, HYDRAULIC PUMP M	1			
10	10	47462	SCREW, PUMP MOUNTING BRA	2			
11	13	37272	LOCKWASHER, PUMP MOUNTIN	2			
12	10	37612	SCREW, HYDRAULIC PUMP TO	1			
13	10	34354	SCREW, HYDRAULIC PUMP TO	1			
14	132	37459	LOCKWASHER, HYDRAULIC PUN	2			
15	12	25909	WASHER< HYDRAULIC PUMP SC	2			
16	23	57369	SPACER, HYDRAULIC PUMP SCF	1			
17		63005	BRACE, HYDRAULIC PUMP	1			
18	10	34353	SCREW, BRACE TO HYDRAULIC	1			
19	13	35048	LOCKWASHER, BRACE SCREW	2			
20	12	34714	WASHER, BRACE SCREW	1			
21		62649	OIL COOLER	1	SERIAL 00000000-03415950		
21		64865	OIL COOLER	1	SERIAL 03523621-09999999		
22	32	57231	HOSE, OIL COOLER TO THERMO	1	SERIAL 00000000-03415950		
23	32	57230	HOSE, OIL COOLER TO WATER F	1	SERIAL 00000000-03415950		
22	32	64917	HOSE, OIL COOLER TO THERMO	1	SERIAL 00352621-09999999		
23	32	62010	HOSE, OIL COOLER TO WATER F	1	SERIAL 00352621-09999999		
24	54	32780	CLAMP, HOSE ATTACHING	4			
25	54	64324	CLAMP, HOSE ATTACHING TO O	2			
26		62870	BRACKET, OIL COOLER	1	SERIAL 00000000-03415950		
26		64864	BRACKET, OIL COOLE	1	SERIAL 33523621-09999999		
27		56328	BRACKET, CLAMP-OIL COOLER	1			
28	10	21625	SCREW, CLAMP BRACKET TO OI	2			
29	11	20361	NUT, CLAMP BRACKET SCREW	2	SERIAL 00000000-03415950		
30		62871	PLATE, MOUNTING -OIL COOLEF	1	SERIAL 00000000-03415950		
31	10	57357	SCREW, MOUNT PLATE TO ENG	1	SERIAL 00000000-03415950		
32	12	34567	WASHER< MOUNT PLATE SCRE	2	SERIAL 00000000-03415950		
33	10	26068	SCREW, OIL COOLER BRACKET	1	SERIAL 00000000-03415950		
34	12	26825	WASHER, OIL COOLER BRACK	2	SERIAL 00000000-03415950		
35	11	35814	NUT, OIL COOLER BRACKET SCF	1	SERIAL 00000000-03415950		