


BREAKDOWN OF WATER PUMP

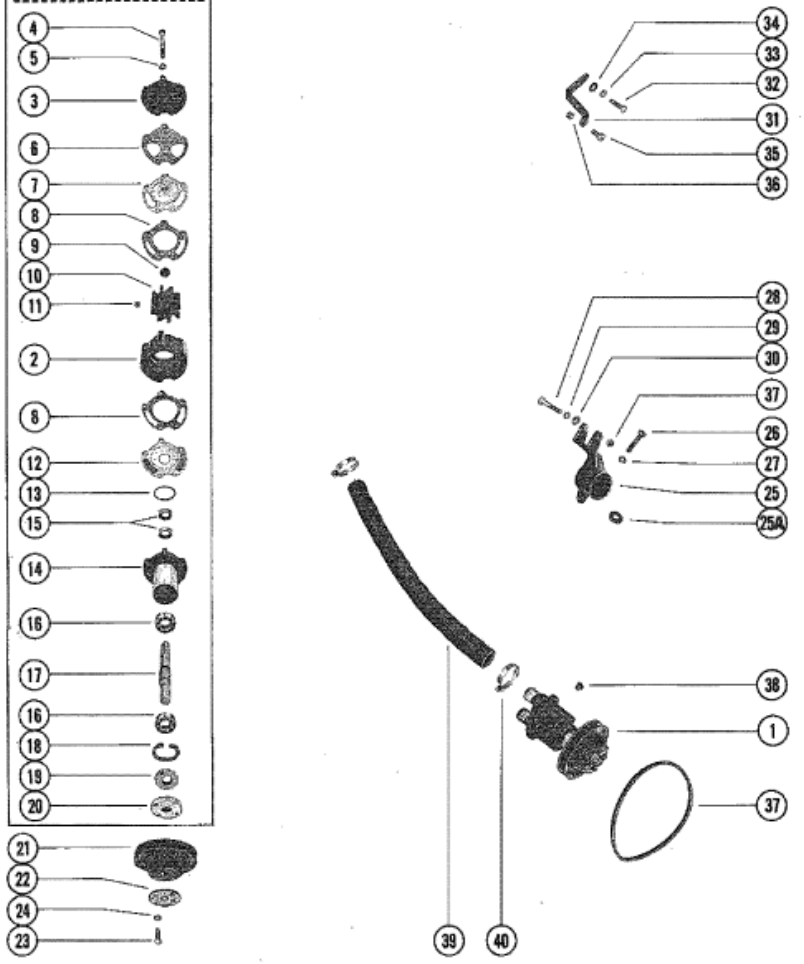

Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	46	72774A11	WATER PUMP ASSEMBLY	1	
2	46	72774	WATER PUMP BODY	1	
3		87631	COVER, WATER PUMP	1	
4	10	63328	SCREW, COVER TO BODY (3")	5	
5	12	20084	WASHER, COVER TO BODY SC	5	
6	27	72779	GASKET, COVER TO OUTER W	1	
7		72777	WEAR PLATE	1	
8	27	72780	GASKET, BODY TO WEAR PLA	2	
9	19	59504	PLUG, IMPELLER	1	
10	47	59362A 1	IMPELLER ASSEMBLY	1	
11	28	56662	KEY, IMPELLER DRIVE	1	
12		72778	WEAR PLATE	1	
13	25	37340	"O" RING, PUMP HOUSING TO	1	
14	46	71497A 2	PUMP HOUSING	1	
15	26	23300	OIL SEAL, WATER PUMP SH	2	
16	30	72961	BALL BEARING, WATER PUM	2	
17		59501	SHAFT, WATER PUMP	1	
18	53	23720	RING, SNAP - BALL BEARING	1	
19	26	72785	OIL SEAL, WATER PUMP SH	1	
20		47530	HUB, WATER PUMP PULLEY	1	
21		73798	PULLEY, WATER PUMP	1	
22		58265	CLAMPING RING, PUMP PULLEY	1	
23	10	47277	SCREW, PULLEY TO WATER PU	4	
24	13	39107	LOCKWASHER, WATER PUMP P	4	
25		47488A 1	BRACKET, WATER PUMP	1	
25A	12	79643	WASHER, BRACE SCREW (FOR	1	
26	10	34354	SCREW, WATER PUMP BRACK	1	
27	13	35048	LOCKWASHER, WATER PUMP B	1	
28	10	34353	SCREW, WATER PUMP BRACK	1	
29	13	35048	LOCKWASHER, WATER PUMP B	1	
30	12	34714	WASHER, WATER PUMP BRACK	1	
31		47544	BRACE, WATER PUMP ADJUSTI	1	
32	10	34353	SCREW, BRACE TO STEERING F	1	
33	13	35048	LOCKWASHER, ADJUSTING BRA	1	
34	12	34714	WASHER, ADJUSTING BRACE S	1	
35	10	35786	SCREW, ADJUSTING BRACE TO	1	
36	11	24883	NUT, ADJUSTING BRACE SCRE	1	
37	57	74271	BELT, WATER PUMP	1	
38	22	32802	PLUG, PIPE (FOR WATER PUM	1	
39	32	86216	HOSE, MOLDED - WATER PUM	1	
40	54	22780	CLAMP, HOSE ATTACHING	2	