

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		62952	PLATE, TRANSC	1		
2	22	47902	VENT, OIL RESERVOIR (TRANSC	1		
3		54244A	COVER ASSEMBLY, OIL RESERV	1		
4	27	54307	GASKET, OIL RESERVOIR COVER	1		
5	10	54523	SCREW, OIL RESERVOIR COVER	8		
6		55083	DIPSTICK, OIL LEVEL - OIL RESE	1		
7	12	34876	WASHER, GIMBAL HOUSING TO	8		
8	11	35000	NUT, GIMBAL HOUSING TO TRAI	8		
9		54234	COVER, EXHAUST	1		
10		55897	SEAL, EXHAUST COVER	1		
11	10	20639	SCREW, EXHAUST COVER TO TI	15		
12	11	29250	NUT, EXHAUST COVER SCREW	15		
13	10	24234	SCREW, EXHAUST COVER TO TI	2		
14	22	34982	CONNECTOR, TRANSCOM PLATE	1		

