



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	77441	HARNESS (FUSED ENGINES)	1		
1	84	86676A 2	HARNESS (NON-FUSED ENGINES)	1	SERIAL 00000000-05818557	
1	84	93177A 1	HARNESS (NON-FUSED ENGINE)	1	SERIAL 05818558-09999999	
2		26079	PLATE, WIRING HARNESS TO M			
3	10	46718	SCREW, WIRING HARNESS PLA	4		
4		77440	BRACKET, MOUNTING-HARNESS	1		
5	10	34354	SCREW, MOUNTING BRACKET A	2		
6	13	35048	LOCKWASHER, MOUNTIN BRACI	2		
7		64884	TAB, WIRING HARNESS (USED W	2		
7	54	55098	"J" CLIP (USED WITH B-84-86676	1		
8	89	76416A 1	STARTER SOLINOID	1		
9	10	69028	SCREW, STARTER SOLENOID TI	2		
11	13	26996	LOCKWASHER, STARTER SOLEI	2		
12	11	68219	NUT, STARTER SOLENOID TERM	2		
13	13	26993	LOCKWASHER, STARTER SOLEI	2		
14	11	68292	NUT, STARTER SOLENOID TERM	2		
15	88	78813	CIRCUIT BREAKER (40 AMP)	1		
--	11	68219	NUT, CIRCUIT BREAKER TEF	2		
--	13	26996	LOCKWASHER, CIRCUIT BRE	2		
16	10	24637	SCREW, CIRCUIT BREAKER TO E	2		
17	12	30164	WASHER, CIRCUIT BREAKER SC	2		
18	11	46438	NUT, CIRCUIT BREAKER SCREW	2		
19		45916	TERMINAL BLOCK	1		
20	10	62568	SCREW, TERMINAL BLOCK	1		
20	10	29240	SCREW, TERMINAL BLOCK	1		
21	11	46438	NUT, TERMINAL BLOCK SCREW	1		
22	11	20361	NUT, STARTER SOLENOID SCRE	2		
23	84	78581A 2	WIRING HARNESS ASSEMBLY, A	1	USED WITH FUSED ENGINES	
24		57908 2	SLEEVE, WIRING HARNESS USE	3	USED WITH FUSED ENGINES	
26	54	78945	"J" CLIP, ALTERNATOR HARNES	2	USED WITH FUSED ENGINES	
27	88	79023A55	FUSE ASSEMBLY (55 AMP)	1	USED WITH FUSED ENGINES S	
27	88	79023A90	FUSE ASSEMBLY (90 AMP)	1	SERIAL 05060219-05375022	
27A	84	79139A 3	JUMPER WIRE, 90 AMP FUSE TC	1	SERIAL 05060219-05375022	
28	85	79695	INSULATOR, BOOT	1	FUSED ENGINES	
29	13	26992	LOCKWASHER, HARNESS TO FL	1	FUSED ENGINES	
30	11	21825	NUT, HARNESS TO FUSE STUD	1	FUSED ENGINES	