



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1		66417	BRACKET, TRANSMISSION (REA)	2			
1		52158A20	BRACKET, TRANSMISSION (REA)	2			
2	10	37269	SCREW, BRACKET (2")	4			
2	10	47462	SCREW, BRACKET (1-1/4") (HOR	4			
3	13	32993	LOCKWASHER, BRACKET SCREW	4			
4	10	57357	SCREW, CLAMPING (2-1/4")	2			
4	10	47654	SCREW, CLAMPING (2-3/4") (HOF	2			
5	54	47528	CLAMP, CLAMPING SCREW (HOF	4			
6	13	32993	LOCKWASHER, CLAMPING SCREW	1			
7	11	29553	NUT, CLAMPING SCREW	2			
8		71128A 2	BRACKET, MOUNTING - ENGINE	2			
9	10	68101	SCREW, MOUNTING BRACKET (5			
9	10	34354	SCREW, MOUNTING BRACKET (1			
10	13	35048	LOCKWASHER, MOUNTING BRACKET	6			
11	10	37269	SCREW, CLAMPING-MOUNTING	2			
12	13	32993	LOCKWASHER, CLAMPING SCREW	2			
13	11	29553	NUT, CLAMPING SCREW	2			
14		66166A 4	TRUNNION, ADJUSTING-MOUNT	4			
15	13	68102	LOCKWASHER, MOUNTING BRACKET	4			
16		66284A 2	BASE, ENGINE MOUNT	4			
17	11	20739	NUT, JAM-ENGINE MOUNT BASE	8			
18	14	66658	TAB WASHER, BASE NUT	4			