



- |   |  |
|---|--|
| 1 - Vapor Separator Tank (VST)              | 11 - Engine Coolant Temperature Sensor (ECT)           |
| 2 - Throttle Body                           | 12 - Electronic Control Module (ECM)                   |
| 3 - Distributor                             | 13 - Fuel Pump Relay                                   |
| 4 - Coil                                    | 14 - Ignition/System Relay                             |
| 5 - Knock Sensor (KS) Module                | 15 - Fuel Pump Fuse                                    |
| 6 - Data Link Connector (DLC)               | 16 - ECM/IGNITION Feed/KS Module/Injectors Fuse        |
| 7 - Manifold Absolute Pressure (MAP) Sensor | 17 - ECM/DLC/Battery Fuse                              |
| 8 - Knock Sensor                            | 18 - Harness Connector To Starting/Charging Harness    |
| 9 - Idle Air Control (IAC)                  | 19 - Positive (+) Power Lead To Engine Circuit Breaker |
| 10 - Throttle Position (TP) Sensor          |  |

14977

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-	84	807698A 2	HARNESS, EFI Wiring	1	(VST Fuel System) SN# 0K00000C	
-	84	860224A 2	HARNESS, EFI Wiring	1	(Fuel Cooled System) SN# 0K0001E	