



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1347	4180A 1	CARBURETOR ASSEMBLY, COMI	1	
1	1397	4330	AIR HORN ASSEMBLY	1	
2	1397	3314	LEVER, AIR VALVE LOCKOUT	1	
3			ROLL PIN, LOCKOUT LEVER	1	0,4
4	1397	3313	HOLDER KIT, SECONDARY ME	1	
5	1397	4331	METERING ROD, SECONDARY	2	
6	10	48137	SCREW, AIR HORN TO FLOAT	2	
7	10	34370	SCREW, AIR HORN TO FLOAT	5	
8	10	48395	SCREW, AIR HORN TO FLOAT	2	
9	1397	3311	LEVER, ACTUATING - PUMPINC	1	
10			ROLL PIN, HINGE - PUMP LEVE	1	0,4
11			PUMP ASSEMBLY	1	0,4
12			SPRING, PUMP RETURN	1	0
13			NEEDLE AND SEAT ASSEMBLY	1	0,4
14			GASKET, NEEDLE AND SEAT	1	0,4
15			PULL CLIP, FLOAT NEEDLE	1	0
16			GASKET, AIR HORN	1	0,4,3
17			METERING ROD, PRIMARY	2	0
18			JET, PRIMARY	2	0
19	1397	4326	CHOKE SHAFT AND LEVER AS:	1	
19		52730	CHOKE LEVER	1	
20	10	27881	SCREW, CHOKE LEVER ATTAC	1	
21	13	26994	LOCKWASHER, CHOKE LEVER	1	
22	11	21270	NUT, CHOKE LEVER SCREW	1	
23	1397	4327	VALVE, CHOKE - CHOKE SHAF	1	
24	10	48139	SCREW, CHOKE VALVE TO CHI	2	
25	1397	3327	FLOAT ASSEMBLY	1	
26	17	48140	PIN, HINGE - FLOAT	1	
27	1397	3323	LEVER, INTERMEDIATE CHOKE	1	
28	1397	3332	BAFFLE, FLOAT BOWL	1	
29	1397	3324	ROD, CHOKE	1	
30			CLIP, CHOKE ROD	1	0,4
31	1397	3318	ROD, VACUUM CONTROL	1	
32			CLIP, VACUUM CONTROL ROD	1	0,4
33	1397	3339	BRACKET ASSEMBLY, VACUUM	1	
34	10	48138	SCREW, VACUUM CONTROL B	1	
35	1397	3317	CONTROL ASSEMBLY, VACUUM	1	
36	1397	3320	HOSE, VACUUM	1	
37	1397	3328	POWER PISTON ASSEMBLY	1	
38	24	48142	SPRING, METERING ROD - PRI	1	
39	1397	3329	RETAINER, POWER PISTON	1	