



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		47805	TRANSMISSION (DIRECT DRIVE)	1,....		
1		47806	TRANSMISSION (1.523:1 REDUC	,1,...		
1		47807	TRANSMISSION (1.909:1 REDUC	,,1,...		
1		47808	TRANSMISSION (2.57:1 REDUC	,...1,		
1		47809	TRANSMISSION (2.909:1 REDUC	,....1		
2	10	47724	SCREW, TRANSMISSION TO ENI	4,....		
2	10	47724	SCREW, TRANSMISSION TO ENI	,6,6,6,E		
3	16	45199	STUD, TRANSMISSION TO ENGI	2,....		
4	13	32993	LOCKWASHER, TRANSMISSION	6,6,6,6,		
5	11	22024	NUT, TRANSMISSION STUD	2,....		
6	22	47629	ELBOW, HOSE TO TRANSMISSIC	1,1,1,1,		
7	32	47516 1	HOSE, OIL COOLER TO TRANSM	1,....		
7	32	47516 3	HOSE, OIL COOLER TO TRANSM	,1,1,1,1		
8	22	47630	ELBOW, HOSE TO OIL COOLER (1,1,1,1,		
9		47613	SWITCH, NEUTRAL SAFETY	1,1,1,1,		
10		48381	FLANGE (1")	OPT.,0		
10		48382	FLANGE (1 1/8")	OPT.,0		
10		48383	FLANGE (1 1/4")	OPT.,0		
10		48384	FLANGE (1 3/8")	OPT.,0		
10		48385	FLANGE (1 1/2")	OPT.,0		
11		48648	BRACKET, SHIFT CABLE	1,1,1,1,		
12	12	37407	WASHER, SHIFT CABLE TO BRAI	1,1,1,1,		
13	11	46438	NUT, SHIFT CABLE TO BRACKET	1,1,1,1,		
14	22	47629	ELBOW, HOSE TO TRANSMISSIC	1,....		
15	23	36159	BUSHING, REDUCING - TRANSM	,1,1,1,1		
16	22	47631	ELBOW, HOSE TO TRANSMISSIC	,1,1,1,1		
17	32	47516 4	HOSE, TRANSMISSION TO OIL C	1,....		
17	32	47516 2	HOSE, TRANSMISSION TO OIL C	,1,1,1,1		
18	22	47630	ELBOW, HOSE TO OIL COOLER (1,1,1,1,		
19		48515	LEVER, SHIFT - TRANSMISSION	1,1,1,1,		
20	12	20722	WASHER, SHIFT LEVER TO TRA	1,1,1,1,		
21	13	26993	LOCKWASHER, SHIFT LEVER TC	1,1,1,1,		
22	11	20083	NUT, SHIFT LEVER TO TRANSMI	1,1,1,1,		
23		48652	ADAPTOR, SHIFT CABLE TO SHII	1,1,1,1,		
24	16	48680	STUD, SHIFT CABLE ADAPTOR T	1,1,1,1,		
25	12	20533	WASHER, SHIFT CABLE ADAPTC	1,1,1,1,		
26	11	46887	NUT, SHIFT CABLE ADAPTOR ST	1,1,1,1,		
27	13	29402	WAVE WASHER, SHIFT CABLE A	1,1,1,1,		
28	12	37407	WASHER, SHIFT CABLE ADAPTC	1,1,1,1,		
29	11	46438	NUT, SHIFT CABLE ADAPTOR ST	1,1,1,1,		
30	10	20629	SCREW, SHIFT CABLE TO ADAP	1,1,1,1,		