



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1347	4179A 2	CARBURETOR ASSEMBLY, COMI	1	SERIAL 00000000-04176468	
-	1347	5981A 1	CARBURETOR ASSEMBLY, COMI	1	SERIAL 04176469-09999999	
1	1397	4324	AIR HORN ASSEMBLY	1	SERIAL 00000000-04176468	
1	1397	6373	AIR HORN ASSEMBLY	1	SERIAL 04176469-09999999	
2	1397	3314	LEVER, AIR VALVE LOCKOUT	1		
3			ROLL PIN, LOCKOUT LEVER	1		3,4
4	1397	3313	HOLDER KIT, SECONDARY ME	1		
5	1397	4325	METERING ROD, SECONDARY	2		
6	10	48137	SCREW, AIR HORN TO FLOAT	2		
7	10	34370	SCREW, AIR HORN TO FLOAT	5		
8	10	48395	SCREW, AIR HORN TO FLOAT	2		
9	1397	3311	LEVER, ACTUATING - PUMP	1		
10			ROLL PIN, HINGE - PUMP LEVE	1		3,4
11			PUMP ASSEMBLY	1		3,4
12			SPRING, PUMP RETURN	1		3
13			NEEDLE AND SEAT ASSEMBLY	1		3,4
14			GASKET, NEEDLE AND SEAT	1		3,4
15			PULL CLIP, FLOAT NEEDLE	1		3
16			GASKET, AIR HORN	1		3,4,5
17			METERING ROD, PRIMARY	2		3
18			JET, PRIMARY	2		3
19	1397	4326	CHOKE SHAFT AND LEVER AS:	1		
20	1397	4327	VALVE, CHOKE - CHOKE SHAF	1		
21	10	48139	SCREW, CHOKE VALVE TO CHI	2		
22	1397	3327	FLOAT ASSEMBLY	1		
23	17	48140	PIN, HINGE - FLOAT	1		
24	1397	3323	LEVER, INTERMEDIATE CHOKE	1		
25	1397	3332	BAFFLE, FLOAT BOWL	1		
26	1397	3324	ROD, CHOKE	1		
27			CLIP, CHOKE ROD	1		3,4
28	1397	3319	CAM, FAST IDLE	1		
29	1397	3318	ROD, VACUUM CONTROL	1		
30			CLIP, VACUUM CONTROL ROD	1		3,4
31	1397	3339	BRACKET ASSEMBLY, VACUUM	1		
32	10	48138	SCREW, VACUUM CONTROL B	1		
33	1397	3317	CONTROL ASSEMBLY, VACUUM	1		
34	1397	3320	HOSE, VACUUM	1		
35	1397	3328	POWER PISTON ASSEMBLY	1		
36	24	48142	SPRING, METERING ROD - PRI	1		
37	1397	3329	RETAINER, POWER PISTON	1		
38	1397	3328	RETAINER, PUMP DISCHARGE	1		