



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	69864A	STARTER MOTOR ASSEMBLY	1	FOR BREAKDOWN OF STARTER	
2	16	52387	STUD, STARTER MOTOR	1		
3	13	26992	LOCKWASHER, STARTER MOTO	1		
4	11	20890	NUT, STARTER MOTOR STUD	1		
5	10	34545	SCREW, STARTER MOTOR TO C	1		
5	10	34544	SCREW, STARTER MOTOR TO C	1		
6	13	32993	LOCKWASHER, STARTER MOTO	2		
7	11	32219	NUT, STARTER TERMINAL (3/8"	1		
8	13	26995	LOCKWASHER, STARTER TERM	2		
9	11	26419	NUT, STARTER TERMINAL (#8)	2		
10		35363	BRACE, STARTER MOTOR	1		
11	10	35765	SCREW, BRACE TO ENGINE (5/8	1		
12		34625	WATER TEMPERATURE SENDEL	1		
13	13	26996	LOCKWASHER, WATER TEMPE	1		
14	11	20645	NUT, WATER TEMPERATURE	1		
15		34623	OIL PRESSURE SENDER ASSEM	1		
16	13	26996	LOCKWASHER, OIL PRESSURE	1		
17	11	20645	NUT, OIL PRESSURE SENDER	1		
18	22	46932	ELBOW, OIL PRESSURE SENDEL	1		
19	22	38992	NIPPLE, OIL PRESSURE SENDEL	1		
20		38559	SWITCH, OIL PRESSURE	1	SERIAL 00000000-04499780	
21	12	20878	WASHER, OIL PRESSURE SWI	1	SERIAL 00000000-04499780	
22	11	20645	NUT, OIL PRESSURE SWITCH	1	SERIAL 00000000-04499780	
23		69729	ALTERNATOR ASSEMBLY	1	FOR BREAKDOWN OF STARTER	
24	10	20055	SCREW, GROUND CABLE TO AL	1		
25	13	26996	LOCKWASHER, GROUND CABLE	1		
26	12	30164	WASHER, GROUND CABLE SCRE	1		
27	13	26991	LOCKWASHER, ALTERNATOR TI	1		
28	11	68531	NUT, ALTERNATOR TERMINAL	1		
29		47498	BRACE, ALTERNATOR ADJUSTI	1		
30	10	74824	SCREW, ALTERNATOR BRACE T	1		
31	13	39107	LOCKWASHER, ALTERNATOR BI	1		
32	12	26168	WASHER, ALTERNATOR BRACE	1		
33	23	36534	SPACER, ALTERNATOR BRACE	1		
34	10	37612	SCREW, ALTERNATOR BRACE T	1		
35	13	35048	LOCKWASHER, ALTERNATOR BI	1		
36		48104	BRACKET, ALTERNATOR MOUN	1		
37	10	76926	SCREW, ALTERNATOR BRACKE	3		
38	13	35048	LOCKWASHER, ALTERNATOR BI	3		
39	10	48308	SCREW, ALTERNATOR TO ALTE	1		
40	22	22185	PUSHING, ALTERNATOR BRACK	1		