



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	70959	WIRING HARNESS	1		
2		26079	PLATE, WIRING HARNESS TO M	1		
3	10	46718	SCREW, WIRING HARNESS PLA	4		
4		64709	BRACKET, MOUNTING - HARNE	1		
5	10	52498	SCREW, MOUNTING BRACKET A	2		
6	13	32993	LOCKWASHER, MOUNTING BRA	2		
7		64884	TAB, WIRING HARNESS	1		
8	87	61053	STARTER SOLENOID	1	SERIAL 00000000-04499990	
8	89	68258	STARTER SOLENOID	1	SERIAL 04499391-09999999	
9	10	28063	SCREW, STARTER SOLENOID TI	2		
10	13	26992	WASHER, STARTER SOLENOID	2		
11	13	26996	LOCKWASHER, STARTER SOLEI	2		
12	11	68219	NUT, STARTER SOLENOID TERM	2		
13	13	26993	LOCKWASHER, SATARTER SOLI	2		
14	11	68292	NUT, STARTER SOLENOID TERM	2		
15	88	65093	CIRCUIT BREAKER	1		
--	11	20645	NUT, CIRCUIT BREAKER TERM	2		
--	13	26996	LOCKWASHER, CIRCUIT BREA	2		
16	10	47618	SCREW, CIRCUIT BREAKER TO	2		
17	25	61999	GROMMET, CIRCUIT BRAKER SC	4		
18	12	47960	WASHER, CIRCUIT BREAKER SC	4		
19	23	61998	SPACER, CIRCUIT BREAKER GRI	2		
20	12	30164	WASHER, CIRCUIT BREAKER SC	2		
21	11	46438	NUT, CIRCUIT BREAKER SCREW	2		