



1402

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1641	4855A13	GEAR HOUSING ASSY, COMPLE	1		
-	1641	4855A14	GEAR HOUSING ASSY, COMPLE	1		
1	1641	4855A 6	GEAR HOUSING ASSEMBLY	1		
2	16	57982	STUD, GEAR HOUSING (1-7/8	1		
3	31	35246	ROLLER BEARING, DRIVE SH	1		
4	10	28634	SCREW, VENT - GEAR HOUSIN	1		
5	12	20260	WASHER, SEAL - VENT SCREW	1		
6	43	62880	PINION GEAR	1		
7	12	54048	WASHER, PINION GEAR TO DF	1		
8	11	55819	NUT, PINION GEAR TO DRIVE :	1		
9	45	62783	DRIVE SHAFT	1		
10	15	26320A 1	SHIM ASSY, ROLLER BEARING	AR		
11	31	48941A 1	TAPERED ROLLER BEARING A	1		
12	31	35990A 1	TAPERED ROLLER BEARING A	1		
13	25	54030	"O" RING, GEAR HOUSING	1		
14		31640A 1	TRIM TAB ASSEMBLY, GEAR H	1		
15	10	49354	SCREW, TRIM TAB TO GEAR H	1		
16	15	55499A 1	SHIM ASSY, ROLLER BEARING	AR	LEFT HAND ROTATION	
17	31	54038A 1	TAPERED ROLLER BEARING A	1	LEFT HAND ROTATION	
18	44	62820	PROPELLER SHAFT	1	LEFT HAND ROTATION	
19	31	54036A 1	TAPERED ROLLER BEARING A	1	LEFT HAND ROTATION	
16	15	47397A 1	SHIM ASSY, ROLLER BEARING	AR	RIGHT HAND ROTATION	
17	31	62801A 1	TAPERED ROLLER BEARING A	1	RIGHT HAND ROTATION	
18	44	62792	PROPELLER SHAFT	1	RIGHT HAND ROTATION	
19	31	62799A 1	TAPERED ROLLER BEARING A	1	RIGHT HAND ROTATION	
20	43	62881	DRIVE GEAR	1		
21		66103A 1	THRUST RING ASSEMBLY	1		
22	23	66093	LOAD RING, THRUST RING	1		
23	25	34821	"O" RING, BEARING CARRIER	1		
24		62813A 1	BEARING CARRIER ASSEMBLY	1		
25	31	54042	ROLLER BEARING, BEARING	1		
26	26	54926	OIL SEAL, BEARING CARRIER	2		
27	28	30281	KEY, LOCATING - BEARING CA	1		
28	14	54167	TAB WASHER, GEAR HOUSING	1		
29		54163	COVER, GEAR HOUSING	1		
30		55074	THRUST HUB	1		
31	12	55073A 1	WASHER ASSEMBLY, SPLINED	1		
32	12	55072	THRUST WASHER, BEARING C	1		
33	14	34817	TAB WASHER, PROPELLER NUT	1		
34	11	54034	NUT, PROPELLER (1-1/4-7 THRE	1		
25	25	54029	"O" RING, GEAR HOUSING	1		