



**JACKSHAFT  
 MODELS**

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	45	94819A 3	DRIVE SHAFT ASSEMBLY	1		
2		52504	FLANGE, DRIVE SHAFT	2		
3		61221	COVER AND BEARING KIT	2		
4	22	74036	GREASE FITTING	2		
5	10	52498	SCREW, DRIVE SHAFT FLANGE	8		
6	11	34933	NUT, FLANGE SCREW	8		
7		42304A 2	BEARING SUPPORT ASSEMBLY	1		
8	26	93924	OIL SEAL	1		
9	30	93944A 1	BALL BEARING	1		
10	53	93914	SNAP RING, BALL BEARING	1		
11	22	74036	GREASE FITTING	1		
12		93908A 1	SHAFT ASSEMBLY, INPUT	1		
13	19	93921	EXPANSION PLUG	1		
14	53	93915	SNAP RING, INPUT SHAFT	1		
15	22	74036	GREASE FITTING	1		
16		93918A 1	SHIELD ASSEMBLY, LOWER	2		
17	10	76926	SCREW, LOWER SHIELD TO SUF	6		
18		93919A 1	SHILED ASSEMBLY, UPPER	2		
19	10	96995	SCREW, UPPER AND LOWER SH	8		
20	11	99405	NUT, SHIELD SCREW	8		
21		93906A 2	SHAFT ASSEMBLY, OUTPUT	1		
22	25	25439	"O" RING	2		
23	53	94104	SNAP RING, BALL BEARING, INT	1		
24	30	62780A 1	BALL BEARING	1		
25		49736A 3	COUPLING ASSEMBLY	1		
26	23	95966	BUSHING, COUPLING	1		
27	12	34567	WASHER, HOUSING SCREW	6		
28	11	98533	NUT, HOUSING SCREW	6		
29	53	94103	SNAP RING, EXTERNAL	1		
30	10	57053	BOLT, BEARING SUPPORT (4-1/2	2		
32	12	42307	WASHER, BEARING SUPPORT B	4		
33	11	28040	NUT, BEARING SUPPORT BOLT	2		
34	84	41575A 1	HARNESS ASSEMBLY, SHIFT AN	1		