



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		99908A 3	EXHAUST MANIFOLD ASSEMBLY	1	(Cast Iron)	
2	22	32802	PIPE PLUG (1/8-27 NPT)	1		
3	22	32803	PIPE PLUG, DRAIN	1		
4	23	72119	WATER SLEEVE	1		
5	16	78438	STUD, EXHAUST MANIFOLD TO	3		
6	10	89679	SCREW, EXHAUST MANIFOLD TI	4		
7	13	35048	LOCKWASHER, EXHAUST MANIF	7		
8	11	24883	NUT, EXHAUST MANIFOLD STUC	3		
9	27	68715	GASKET, EXHAUST MANIFOLD T	1		2
10		15995	SENDER, WATER TEMPERATURF	1		
11		89659A 3	THERMOSTAT HOUSING	1		
12		99155A 1	THERMOSTAT	1		
13	27	89656	GASKET, THERMOSTAT HOUSIN	1		2
14	10	73657	SCREW, THERMOSTAT HOUSIN	2		
15	13	39107	LOCKWASHER, THERMOSTAT H	2		
16	12	26825	WASHER, THERMOSTAT HOUSI	2		
17		90890A 2	EXHAUST ELBOW AND RESERV	1	(Cast Iron)	
18	22	32802	PIPE PLUG (1/8-27 NPT)	1		
19	22	33198A 1	CORE PLUG (3/4-14)	2		
20	10	28642	SCREW, DRIVE	4		
21	22	13234A 1	BASE, FILLER HOLE	1		
22	25	45257	"O" RING, FILLER BASE	1		2
23	22	99498	OVERFLOW ELBOW (THREADE	1		
24	22	45084	CONNECTOR, HOSE (W/POWER	1		
25	22	36305	ELBOW, HOSE (W/O POWER ST	1		
26	36	55143	CAP, FILLER	1		
27	22	76170	FITTING, RESERVIOR BY-PASS	1		
28	27	97542	GASKET, ELBOW AND RESERVIC	1		2
29	10	37269	SCREW, ELBOW AND RESERVIC	4		
30	13	32993	LOCKWASHER, ELBOW AND RE:	4		
31		91987A 1	BOTTLE ASSEMBLY, COOLANT F	1		
32	36	91989A 1	CAP ASSEMBLY	1		
33		97864A 2	BRACKET ASSEMBLY, BOTTLE	1		
34	10	47461	SCREW, BOTTLE BRACKET	2		
35	13	37272	LOCKWASHER, BOTTLE BRACKE	2		
36	10	98261	SCREW, BOTTLE TO BRACKET	2		
37	12	25909	WASHER, BOTTLE SCREW	2		
38	32	77457 2	HOSE, COOLANT RECOVERY BO	1		
39	54	54428	CLAMP, HOSE ATTACHING	2		
40	27	71614	GASKET, FILLER CAP	1		