



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		47736A 1	EXHAUST MANIFOLD ASSEMBLY	1	SEE NOTE SERIAL 02313965-09	8
1		47736A 1	EXHAUST MANIFOLD ASSEMBLY	1	SEE NOTE SERIAL 02313965-09	8
2	16	49545	STUD, EXHAUST MANIFOLD TI	8	SEE NOTE SERIAL 02313965-09	8
3	22	48118	PLUG, EXHAUST MANIFOLD	6	SEE NOTE SERIAL 02313965-09	8
4	22	32802	PLUG, PIPE - EXHAUST MANIF	2	SEE NOTE SERIAL 02313965-09	4,2,8
5	27	46820	GASKET, EXHAUST MANIFOLD T	2	SEE NOTE SERIAL 02313965-09	8
6	10	26632	SCREW, EXHAUST MANIFOLD TI	14	SERIAL 00000000-02313964	
6	10	31827	SCREW, EXHAUST MANIFOLD TI	2	SERIAL 00000000-02313964	
7	12	20553	WASHER, EXHAUST MANIFOLD	16	SERIAL 00000000-02313964	
8		38731	END CAP/CONNECTOR, EXHAUS	2	SERIAL 00000000-02313964	
9	27	34345	GASKET, END CAP/CONNECTOR	2	SERIAL 00000000-02313964	
10	10	24234	SCREW, END CAP/CONNECTOR	4	SERIAL 00000000-02313964	
10	10	25299	SCREW, END CAP/CONNECTOR	4	SERIAL 00000000-02313964	
11		34251	END CAP, EXHAUST MANIFOLD I	2	SERIAL 00000000-02313964	
12	27	34345	GASKET, END CAP TO EXHAUST	2	SERIAL 00000000-02313964	
13	10	24234	SCREW, END CAP TO EXHAUST	8	SERIAL 00000000-02313964	
14	27	37296	GASKET, EXHAUST ELBOW	2	SERIAL 00000000-02313964	
15		37298	ELBOW, EXHAUST	2	SERIAL 00000000-02313964	
16	10	37258	SCREW, EXHAUST ELBOW TO E	20	SERIAL 00000000-02313964	
17	11	28770	NUT, EXHAUST ELBOW SCREW	20	SERIAL 00000000-02313964	
18	22	33198	PLUG, PIPE - EXHAUST ELBOW	2	SERIAL 00000000-02313964	
19	27	35671	GASKET, EXHAUST ELBOW TO F	2	SERIAL 00000000-02313964	
20		35672	PLATE, FACE - EXHAUST ELBOW	2	SERIAL 00000000-02313964	
21	27	35671	GASKET, UPPER EXHAUST ELBO	2	SERIAL 00000000-02313964	
22		35674	ELBOW, EXHAUST - UPPER	2	SERIAL 00000000-02313964	
23	10	21951	SCREW, UPPER EXHAUST ELBO	6	SERIAL 00000000-02313964	
24	11	25269	NUT, UPPER EXHAUST ELBOW	6	SERIAL 00000000-02313964	
25	22	33198	PLUG, PIPE - UPPER EXHAUST E	2	SERIAL 00000000-02313964	
26	27	35673	GASKET, UPPER EXHAUST ELBO	2	SERIAL 00000000-02313964	
27		35675	ELBOW, EXHAUST - LOWER	2	SERIAL 00000000-02313964	
28	10	21951	SCREW, UPPER EXHAUST ELBO	8	SERIAL 00000000-02313964	
29	11	25269	NUT, LOWER EXHAUST ELBOW	8	SERIAL 00000000-02313964	
30	22	33198	PLUG, PIPE - LOWER EXHAUST I	4	SERIAL 00000000-02313964	
6	10	37612	SCREW, EXHAUST MANIFOLD TI	8	SERIAL 02313965-09999999	8
6	10	26486	SCREW, EXHAUST MANIFOLD TI	8	SERIAL 02313965-09999999	8
8		48044	END CAP/CONNECTOR, EXHAUS	2	SERIAL 00000000-02508318	8
8		52999	END CAP/CONNECTOR, EXHAUS	2	SERIAL 02313965-09999999	
9	27	48043	GASKET, END CAP/CONNECTOR	2	SERIAL 02313965-09999999	8,2
10	10	25038	SCREW, END CAP/CONNECTOR	8	SERIAL 00000000-02508318	8
10	10	35386	SCREW, END CAP/CONNECTOR	6	SERIAL 02313965-09999999	
10	10	52016	SCREW, END CAP/CONNECTOR	2	SERIAL 02313965-09999999	