



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	332	2983A 6	IGNITION COIL ASSEMBLY	1	
2	10	45102	SCREW, IGNITION COIL CLAMP	1	
2	10	45103	SCREW, IGNITION COIL CLAMP	1	
3	12	37407	WASHER, IGNITION COIL SCRE	1	
4	54	22740	CLIP, IGNITION COIL LEAD	1	
5		22789	"D" WASHER, IGNITION COIL S	1	
6	11	20645	NUT, IGNITION COIL SCREW	2	
7	10	27337	SCREW, IGNITION COIL TO ELEC	2	
8	13	26992	LOCKWASHER, IGNITION COIL S	2	
9		59816	CIRCUIT BREAKER	1	
10	10	36046	SCREW, CIRCUIT BREAKER (1,	2	
11	10	47618	SCREW, CIRCUIT BREAKER TO I	2	
12	25	61999	GROMMET, CIRCUIT BREAKER S	4	
13	23	61998	SPACER, CIRCUIT BREAKER SC	2	
14	12	47960	WASHER, CIRCUIT BREAKER SC	4	
15	11	46438	NUT, CIRCUIT BREAKER SCREW	2	
16		65940	BRACKET, CIRCUIT BREAKER	1	
17	10	53787	SCREW, BRACKET TO ELECTRIC	2	
18	13	26996	LOCKWASHER, BRACKET SCREW	2	
19		25661	STARTER SOLENOID	1	
20	13	26993	LOCKWASHER, STARTER SOLEI	2	
21	11	20083	NUT, STARTER SOLENOID TERM	2	
22	13	26996	LOCKWASHER, STARTER SOLEI	2	
23	11	20645	NUT, STARTER SOLENOID TERM	2	
24	10	20031	SCREW, STARTER SOLENOID TI	2	
25	13	26992	LOCKWASHER, STATER SOLENI	2	
26	84	64408	WIRING HARNESS	1	
27		26079	PLATE, WIRING HARNESS TO M	1	
28	10	46718	SCREW, WIRING HARNESS PLA	4	
29	332	2986A22	SWITCH BOX ASSEMBLY	1	
30	13	26996	LOCKWASHER, SWITCH BOX TE	7	
31	11	45076	NUT, SWITCH BOX TERMINAL	7	
32	10	45218	SCREW, GROUND WIRE TO SWI	1	
33		63878	COMPARTMENT, ELECTRICAL	1	
34	10	52498	SCREW, ELECTRICAL COMPART	2	
35	11	20696	NUT, ELECTRICAL COMPARTME	2	
36		63879	PLATE, SWITCH BOX	1	
37	25	57009	GROMMET, SWITCH BOX PLATE	1	
38	16	65941	STUD, SWITCH BOX AND COVEF	4	
39	13	22773	LOCKWASHER, SWITCH BOX AN	4	
40		65929A 1	COVER ASSEMBLY, ELECTRICAL	1	