



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		60958	TRANSMISSION (DIRECT DRIVE)	1		
1		60959	TRANSMISSION (1.51:1 REDUCT	1		
1		60960	TRANSMISSION (1.99:1 REDUCT	1		
1		60961	TRANSMISSION (2.49:1 REDUCT	1		
1		60962	TRANSMISSION (3.14:1 REDUCT	1		
2	10	60179	SCREW, TRANSMISSION TO ENI	6		
3	13	32993	LOCKWASHER, TRANSMISSION	6		
4	22	63824	ELBOW, HOSE TO TRANSMISSI	1		
5	32	47516 9	HOSE, TRANSMISSION TO OIL C	1		
6	22	47629	ELBOW, HOSE TO OIL COOLER (1		
7		48515	LEVER, SHIFT - TRANSMISSION	1		
8	12	20722	WASHER, SHIFT LEVER TO TRA	1		
9	13	26393	LOCKWASHER, SHIFT LEVER TC	1		
10	11	20083	NUT, SHIFT LEVER TO TRANSMI	1		
11		48652	ADAPTOR, SHIFT CABLE TO SHII	1		
12	16	48680	STUD, SHIFT CABLE ADAPTOR T	1		
13	12	20533	WASHER, SHIFT CABLE ADAPTC	1		
14	11	46887	NUT, SHIFT CABLE ADAPTOR ST	1		
15	13	29402	WAVE WASHER, SHIFT CABLE A	1		
16	12	56681	WASHER, SHIFT CABLE ADAPTC	1		
17	11	46438	NUT, SHIFT CABLE ADAPTOR ST	1		
18	10	20639	SCREW, SHIFT CABLE TO ADAP	1		
19	12	22753	WASHER, SHIFT CABLE SCREW	1		
20	11	46793	NUT, SHIFT CABLE SCREW (5/16	1		
21		63815A 2	BRACKET ASSEMBLY, SHIFT CABLE	1		
22	12	56681	WASHER, SHIFT CABLE STUD	1		
23	11	46438	NUT, SHIFT CABLE STUD	1		
24	10	35585	SCREW, BRACKET TO FLYWHEEL	2		
25	13	26392	LOCKWASHER, BRACKET SCREW	2		
26		47613	SWITCH, NEUTRAL SAFETY	1		
27	22	47629	ELBOW, HOSE TO TRANSMISSI	1		
28	32	47516 9	HOSE, COOLER TO TRANSMISSI	1		
29	22	47629	ELBOW, HOSE TO OIL COOLER (1		
30		48386A 1	FLANGE ASSEMBLY (1")	OPT		
30		48387A 1	FLANGE ASSEMBLY (1 1/8")	OPT		
30		48388A 1	FLANGE ASSEMBLY (1 1/4")	OPT		
30		48389A 1	FLANGE ASSEMBLY (1 3/8")	OPT		
30		48390A 1	FLANGE ASSEMBLY (1 1/2")	OPT		
30		57296A 1	FLANGE ASSEMBLY (1 3/4")	OPT		
30		57296A 1	FLANGE ASSEMBLY (2")	OPT		
31	10	60179	SCREW, FLANGE TO PROPELL	2	SEE NOTE BELOW	