



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		86019	HOUSING, FLYWHEEL	1		
2		86014A 1	COVER, FLYWHEEL HOUSING	1		
3	10	20031	SCREW, COVER TO FLYWHEEL H	7		
3	10	28635	SCREW, COVER TO FLYSHEEL H	1		
4	13	26992	LOCKWASHER, COVER SCREW	8		
5	12	20346	WASHER, COVER SCREW	1		
6	10	34353	SCREW, FLYWHEEL HOUSING T	3		
6	10	48424	SCREW, FLYWHEEL HOUSING T	2		
6	10	63826	SCREW, FLYWHEEL HOUSING T	2		
7	13	37459	LOCKWASHER, FLYWHEEL HOU	6		
8	12	20572	WASHER, FLYWHEEL HOUSING	1		
9	16	64066	STUD, FLYWHEEL HOUSING (2	1		
10	11	32219	NUT, FLYWHEEL HOUSING STUI	1		
11	19	38606	PLUG, FLYWHEEL HOUSING -LL	1		
12		87690	SEAL, FLYWHEEL HOUSING COV	1		
13	27	86015	GASKET, FLYWHEEL HOUSING C	1		