



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		66167	BRACKET, MOUNTING -TRANSM	2		
2	10	37269	SCREW, BRACKET TO TRANSMI	4		
3	13	32993	LOCKWASHER, BRACKET SCRE	4		
4	10	57357	SCREW, CLAMPING - MOUNTING	2		
1		62285	BRACKET, MOUNTING (REAR) V-	2		
2	10	47462	SCREW, BRACKET TO TRANSMI	6		
3	13	32993	LOCKWASHER, BRACKET SCRE	6		
4	10	47654	SCREW, CLAMPING - MOUNTING	2		
4A	54	47528	CLAMP, ADJUSTING TRUNNION	4		
5	13	32993	LOCKWASHER, CLAMPING SCRE	2		
6	11	29553	NUT, CLAMPING SCREW	2		
7		66418	BRACKET, MOUNTING - ENGINE	2		
8	10	68101	SCREW, MOUNTING BRACKET T	6		
9	13	35048	LOCKWASHER, MOUNTING BRA	6		
10		64884	TAB, MOUNTING BRACKET SCRE	1		
11	10	37269	SCREW, CLAMPING - MOUNTING	2		
12	13	32993	LOCKWASHER, CLAMPING SCRE	2		
13	11	29553	NUT, CLAMPING SCREW	2		
14		66166	TRUNNION, ADJUSTING - MOUN	4		
15	13	68102	LOCKWASHER, MOUNTING BRA	4		
16		66284	BASE, ENGINE MOUNT	4		
17	11	20739	NUT, JAME - ENGINE MOUNT E	8		
18	14	66658	T&B WASHER, CLAMPING SCRE	2		