



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	86683A	2 WIRING HARNESS (STERN DRIV	1		
1	84	86677A	2 WIRING HARNESS (INBOARD)	1		
2		26079	PLATE< WIRING HARNESS TO M	1		
3	10	46718	SCREW, WIRING HARNESS PLA	4		
4		87090	BRACKET, MOUNTING - HARNESS	1		
5	10	52498	SCREW, MOUNTING BRACKET A	2		
6	13	32993	LOCKWASHER, MOUNTING BRA	2		
7		64884	TAB, WIRING HARNESS	1		
8	89	68258	STARTER SOLENOID	1		
9	10	69054	SCREW, STARTER SOLENOID TI	2		
10	13	26992	LOCKWASHER, STARTER SOLEI	2		
11	13	26996	LOCKWASHER, STARTER SOLEI	2		
12	11	68219	NUT, STARTER SOLENOID TERM	2		
13	13	26993	LOCKWASHER, STARTER SOLEI	2		
14	11	68292	NUT, STARTER SOLENOID TERM	2		
15	88	65093	CIRCUIT BREAKER (40 AMP)	AR		
15	88	78813	CIRCUIT BREAKER (50 AMP)	AR		
--	11	68219	NUT, CIRCUIT BREAKER TERM	2		
--	13	26996	LOCKWASHER, CIRCUIT BREA	2		
16	10	47618	SCREW, CIRCUIT BREAKER TO E	2		
17	25	61999	GROMMET, CIRCUIT BREAKER E	4		
18	125	47960	WASHER, CIRCUIT BREAKER SC	4		
19	23	61998	SPACER, CIRCUIT BREAKER GRI	2		
20	12	30164	WASHER, CIRCUIT BREAKER SC	2		
21	11	46438	NUT, CIRCUIT BREAKER SCREW	2		
22	54	54178	"J" CLIP, WIRING HARNESS	1		
22	54	73668	"J" CLIP, WIRING HARNESS	1		
23	88	79023A55	FUSE ASSEMBLY, 55 AMP	1	USE WITH ENGINES EQUIPPED	
23	88	79023A90	FUSE ASSEMBLY, 90 AMP	1	USE WITH ENGINES EQUIPPED	
24	13	26992	LOCKWASHER, FUSE STUD	1	USE WITH ENGINES EQUIPPED	
25	11	21825	NUT, FUST STUD	1	USE WITH ENGINES EQUIPPED	
26	85	79695	BOOT, INSULATOR - FUSE STUD	1	USE WITH ENGINES EQUIPPED	
27	84	79139A	7 JUMPER WIRE, 90 AMP FUSE	1	USE WITH ENGINES EQUIPPED	
28	84	78581A	3 WIRING HARNESS, ALTERNATO	1	USE WITH ENGINES EQUIPPED	