



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	98423A 8	WIRING HARNESS	1		
2		26079A 2	PLATE, WIRING HARNESS TO M	1		
3	10	34696	SCREW, WIRING HARNESS PLA	4		
4		98493A 2	BRACKET, MOUNTING	1		
5	10	49668	SCRE, MOUNTING BRACKET	3		
6	13	26992	LOCKWASHER, MOUNTING BRA	3		
7	390	7804A 3	IGNITION AMPLIFIER	1		
8	10	76596	SCREW, IGNITION AMPLIFIER (1	3		
9	13	26992	LOCKWASHER, IGNITION AMPLII	3		
10	23	92152	SPACER, IGNITION AMPLIFER SC	3		
11		97258A 1	WATER TEMPERATURE SENDEL	1		
11		49734A 1	WATER TEMPERATURE SENDEL	OPT		
12	13	26996	LOCKWASHER, WATER TEMPE	1		
13	11	68219	NUT, WATER TEMPERATURE	1		
14		90806	OIL PRESSURE SENDER	1		
14		37293	OIL PRESSURE SENDER (DUAL)	OPT		
15	13	26996	LOCKWASHER, OIL PRESSURE	1		
16	11	68219	NUT, OIL PRESSURE SENDER	1		
17	22	46932	ELBOW, OIL PRESSURE SENDEL	1		
18	22	42554	NIPPLE, OIL PRESSURE SENDEL	1		
19		41170A 2	BRACKET, MOUNTING	1		
20	10	98260	SCREW, MOUNTING BRACEKT (E	1		
21	13	35048	LOCKWASHER, MOUNTING BRA	1		
22	54	78945	CLAMP, BRACKET SCREW	1		
23	10	32132	SCREW, MOUNTING BRACKET	1		
24	13	35048	LOCKWASHER, MOUNTING BRA	1		
25	23	88275	SPACER, MOUNTING BRACKET (	1		
26	88	11178	CIRCUIT BREAKER (50 AMP)	1		
27	13	26996	LOCKWASHER, CIRCUIT BREAK	2		
28	11	68219	NUT, CIRCUIT BREAKER TERMIN	2		
29	10	45862	SCREW, CIRCUIT BREAKER (7/8	2		
30	10	45218	SCREW, INSULATOR (3/8")	1		
31	12	56681	WASHER, CIRCUIT BREAKER SC	2		
32	11	46438	NUT, INSULATOR SCREW	3		
33	85	96819	INSULATOR, CIRCUIT BREAKER	1		
34	89	96054	STARTER SOLENOID	1		
35	10	47910	SCREW, STARTER SOLENOID (5	2		
36	11	20088	NUT, STARTER SOLENOID SCRE	2		
37	13	26992	LOCKWASHER, STARTER SOLEI	2		
38	11	26419	NUT, STARTER SOLENOID TERM	2		
39	11	94320	NUT, STARTER SOLENOID TERM	2		