



- | | |
|--|---|
| 1 - Vapor Separator Tank (VST) | 2 - Throttle Body |
| 3 - Distributor | 4 - Coil |
| 5 - Knock Sensor (KS) Module | 6 - Data Link Connector (DLC) |
| 7 - Manifold Absolute Pressure (MAP) Sensor | 8 - Knock Sensor |
| 9 - Idle Air Control (IAC) | 10 - Throttle Position (TP) Sensor |
| 11 - Engine Coolant Temperature Sensor (ECT) | 12 - Electronic Control Module (ECM) |
| 13 - Fuel Pump Relay (PN 807057) | 14 - Ignition/System Relay |
| 15 - Fuel Pump Fuse | 16 - ECM/Battery Fuse |
| 17 - ECM/Injector Fuse | 18 - Harness Connector to Starting/Charging Harness |
| 19 - Harness Connector to Lanyard Stop Switch (Optional) | |
| 20 - Harness Connector for Dual Engine Data Link Cable | |
| 21 - Positive (+) Power Wire to Engine Circuit Breaker | |

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-	84	806821A 2	WIRING HARNESS (EFI)	1		