



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	806964A	STARTER MOTOR ASSEMBLY	1	(SEE STARTER MOTOR FOR BF	
2	10	805343	SCREW (3/8-16 X 4-3/8 IN.)	2		
3	11	806949	NUT (M8-1.5)	1		
4	11	40021	NUT (M5-0.8)	1		
5	13	39107	LOCKWASHER (5/16 IN.)	1		
6	13	26996	LOCKWASHER (#10)	1		
7	85	79695	BOOT-INSULATOR	1		
8	88	79023A91	FUSE (90 AMP)	1		
9	11	21825	NUT (1/4-28)	1		
10		807653T	ALTERNATOR ASSEMBLY	1	(SEE ALTERNATOR (MANDO) F	
11	12	96457	WASHER-PHENOLIC	1		
12	13	26996	LOCKWASHER (#10)	1		
13	11	79989	NUT (#10-24)	1		
14	13	26992	LOCKWASHER (1/4 IN.)	1		
15	11	94330	NUT (1/4-20)	1		
16		807750T	BRACE	1		
17	10	98261	SCREW (3/8-16 X 3/4 IN.)	1		
18	10	29198	SCREW & LOCKWASHER (5/16-1	1		
19		860370T	BRACKET-ALTERNATOR	1		
20	16	860102	STUD	3		
21	10	56743	SCREW (3/8-24 X 3-1/8 IN.)	1		
22	11	23161	NUT (3/8-24)	1		
23		807767T	BRACKET-IDLER ADJUSTMENT	1		
24	10	98261	SCREW (3/8-16 X 3/4 IN.)	1		
25	11	29250	NUT (5/16-24)	1		
26	43	818381	PINION STUD	1		
27		818380	BUSHING	2		
28		807757T	PULLEY	2		
29	11	817618	NUT (7/16-20)	2		
30		807753T	BRACKET-IDLER	1		
31	11	32219	NUT (3/8-16)	3		
32	10	816601	SCREW (7/16-20 X 1-1/2 IN.)	1		