



- A - Audio Warning System**
- 1 - Oil Pressure Switch
- 2 - Transmission Fluid Temperature Switch
- B - Instrumentation System**
- 1 - Oil Pressure Sender
- 2 - Water Temperature Sender
- C - Charging And Starting System**
- 1 - Alternator
- 2 - Ground Stud
- 3 - starter
- 4 - Circuit Breaker
- 5 - Starter Slave Solenoid
- 6 - Neutral Safety Switch
- a - Harness Connector
- b - Positive (+) Power Wire to EFI Harness
- c - Auxiliary Tachometer Lead



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	84	808035A 2	WIRING HARNESS-ENGINE	1		