



A = FUEL LINE FROM FUEL PUMP

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		861260T	INJECTOR-FUEL	8		
2	25	851889	O-RING	16		3
3		860373A 4	INTAKE MANIFOLD	1		1
4	27	807473A 1	GASKET SET	1		3
5	22	860075	PLUG-PIPE (1/2")	2		
6	22	805408	VALVE-RAIL PRESSURE SERVICE	1		1
7	22	805515	CAP	1		
8	10	808010	SCREW (5/16-18 X 1-3/8 IN.)	8		
9		861804T 1	FUEL RAIL	2		1
10	10	86885	SCREW (1/4-20 X 1-1/2 IN.)	4		
11		861805	TUBE-FUEL CROSS OVER	2		1
12	22	73379	PLUG-PIPE (1/4-18 HEX SOCKET)	2		1
13	22	32802 2	PLUG-PIPE (1/8" HEX HEAD)	1		1
14		807399T	SENSOR-PRESSURE	1		1
15	22	33821	CONNECTOR-FUEL LINE	1		1
16		861249A 1	SENSOR-M.A.P.	1		
17		805223T	SENSOR-M.A.T.	1		1
18		861198	CLIP-MAP SENSOR	1		
19	10	806826	SCREW (#8-32 X 1/4 IN.)	1		
20	25	862053	O-RING	8		
.	27	75611A98	GASKET SET-ENGINE OVERHAU	1		