



14699

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		71128A 2	BRACKET	2		
2	10	68101	SCREW, (.375-16 x 1.375)	2		
3	16	805357	STUD, (.375-16 x 2.130)	4		
4	13	35048	LOCKWASHER, (.375)	4		
5	10	37269	SCREW, (.437-14 x 2.00)	2		
6	13	32993	LOCKWASHER, (.437)	2		
7	11	29553	NUT, (.437-14)	2		
8		66166A 4	TRUNNION	2		
9	13	68102	LOCKWASHER, (.750)	2		
10		66284A 2	BASE ASSEMBLY	2		
11	11	20739	NUT, (.750-16)	2		
12	14	66658	TAB WASHER	2		
13	11	20739	NUT, (.750-16)	2		
14		805496T	BRACKET	1	(PORT) DOWN ANGLE TRANSM	
14		805496T 1	BRACKET	1	(STARBOARD) DOWN ANGLE TI	
14		807724T	BRACKET	1	(PORT) V-DRIVE TRANSMISSIOI	
14		807725T	BRACKET	1	(STARBOARD) V-DRIVE TRANSH	
15	10	40097 60	SCREW, (M12 x 60)	4		
16	10	57357	SCREW, (.437-13 x 2.250)	2	(DOWN ANGLE TRANSMISSION	
16	10	47724	SCREW, (.437-14 x 3.00)	2	(V-DRIVE TRANSMISSION)	
17	13	32993	LOCKWASHER, (.437)	2		
18	11	29553	NUT, (.437-14)	2		
19		66166A 4	TRUNNION	2		
20	13	68102	LOCKWASHER, (.750)	2		
21		816326A 2	BASE ASSEMBLY	2		
22	11	816331	NUT, (.750-16)	2		
23	14	66658	TAB WASHER	2		
24	11	20739	NUT, (.750-16)	2		
25	54	78945	J CLAMP, Harness Support	1		