



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		66167	BRACKET, MOUNTING - TRANSMISSION	2		
2	10	37269	SCREW, BACKET TO TRANSMISSION	4		
3	13	32993	LOCKWASHER, BRACKET SCREW	4		
4	10	57357	SCREW, CLAMPING - MOUNTING	2		
1		62285	BRACKET, MOUNTING (REAR) V-8	2		
2	10	47462	SCREW, BRACKET TO TRANSMISSION	6		
3	13	32993	LOCKWASHER, BRACKET SCREW	6		
4	10	47654	SCREW, CLAMPING - MOUNTING	2		
4A	54	47528	CLAMP, ADJUSTING TRUNNION	4		
5	13	32993	LOCKWASHER, CLAMPING SCREW	2		
6	11	29553	NUT, CLAMPING SCREW	2		
7		66418	BRACKET, MOUNTING - ENGINE	2		
8	10	68101	SCREW, MOUNTING BRACKET TO ENGINE	6		
9	13	35048	LOCKWASHER, MOUNTING BRACKET	6		
10		64884	TAB, MOUNTING BRACKET SCREW	1		
11	10	37269	SCREW, CLAMPING - MOUNTING	2		
12	13	32993	LOCKWASHER, CLAMPING SCREW	2		
13	11	29553	NUT, CLAMPING SCREW	2		
14		66166	TRUNNION, ADJUSTING - MOUNTING	4		
15	13	68102	LOCKWASHER, MOUNTING BRACKET	4		
16		66284	BASE, ENGINE MOUNT	4		
17	11	20739	NUT, JAM - ENGINE MOUNT BASE	8		
18	14	66658	TAB WASHER, CLAMPING SCREW	2		