



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		58057	INTAKE MANIFOLD	1		
2	22	58095	CONNECTOR, INTAKE MANIFOLD	1		
3	32	49122	HOSE, BY-PASS - INTAKE MANIFOLD	1		
4	54	32880	CLAMP, BY-PASS HOSE ATTACH	2		
5	10	37510	BOLT, INTAKE MANIFOLD TO CYLINDER	16		
6	12	49112	WASHER, INTAKE MANIFOLD BC	16		
7		47513	EYE, LIFTING	2		
8	10	34354	SCREW, LIFTING EYE ATTACHING	4		
9	13	35048	LOCKWASHER, LIFTING EYE SCREW	4		
10	27	58088A	GASKET, INTAKE MANIFOLD	1		
11		54534	WATER PUMP ASSEMBLY	1		
12	27	49110	GASKET, WATER PUMP MOUNTING	2		
13	22	54533	CONNECTOR, WATER PUMP - BY-PASS	1		
14	22	48336	PLUG, PIPE - WATER PUMP	1		
15	10	32132	SCREW, WATER PUMP TO CYLINDER	4		
16		52349	PULLEY, WATER PUMP	1		
17	10	47277	SCREW, PULLEY TO WATER PUMP	4		
18	13	39107	LOCKWASHER, WATER PUMP PULLEY	4		
19		58038	BALANCER, HARMONIC - CRANKSHAFT	1		
20		52181	PULLEY, HARMONIC BALANCER	1		
21	10	49101	BOLT, PULLEY AND HARMONIC BALANCER	1		
22	13	49102	LOCKWASHER, PULLEY AND HARMONIC	1		
23	12	49103	WASHER, PULLEY AND HARMONIC	1		
24	10	34353	BOLT, CRANKSHAFT PULLEY TO CRANK	3		
25	13	37459	LOCKWASHER, CRANKSHAFT PULLEY	3		
26	57	48122	BELT, ALTERNATOR DRIVE (48")	1		
27		54532	COVER ASSEMBLY, CRANKCASE	1		
27		54544	COVER ASSEMBLY, CRANKCASE	1		
28	26	49154	OIL SEAL, CRANKCASE FRONT END	1		
29	27	54529	GASKET, CRANKCASE FRONT END	1		
30	10	34277	SCREW, CRANKCASE FRONT END	10		
31	842	4268	CYLINDER BLOCK ASSEMBLY (SILVER)	1		
32		49149	SHAFT, OIL PUMP TO DISTRIBUTOR	1		
33	23	52193	RETAINER, OIL PUMP SHAFT	1		
34		49155	OIL PUMP AND SCREEN ASSEMBLY	1		
35	16	49108	STUD, OIL PUMP TO CYLINDER	1		
36	11	37500	NUT, OIL PUMP STUD	1		
--		34344	VALVE, BY-PASS	1		