



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		47493A 7	DISTRIBUTOR ASSEMBLY, COM	1	
1		47493A 6	DISTRIBUTOR ASSEMBLY, COM	1	
2	393	3230	CAP, DISTRIBUTOR	1	
3		49924	ROTOR, DISTRIBUTOR	1	
4		48789A 1	HOUSING ASSEMBLY, ADAPTC	1	
5	17	20032	PIN, DOWEL - ADAPTOR HOL	2	
6	54	48575	CLAMP, CAP TO ADAPTOR HOL	2	
7	10	37572	SCREW, DISTRIBUTOR CLAMP	2	
8	13	26996	LOCKWASHER, DISTRIBUTOR	2	
9	393	2918A 5	TRIGGER ASSEMBLY	1	
10	10	47618	SCREW, TRIGGER ATTACHING	4	
11	13	26996	LOCKWASHER, TRIGGER ATT	4	
12	10	26595	SCREW, ADAPTOR HOUSING F	4	
13	13	26995	LOCKWASHER, ADAPTOR HOL	4	
14	43	47649	GEAR, DISTRIBUTOR (STANDA	1	
14	43	47619	GEAR, DISTRIBUTOR (OPPISIT	1	
15	17	47617	ROLL PIN, GEAR TO DISTRIBUTOR	1	
16		52618	JUMPER WIRE, DISTRIBUTOR	1	
17	27	52184	GASKET, DISTRIBUTOR	1	
18		52185	CLAMP, DISTRIBUTOR TO INTAK	1	
19	10	54528	SCREW, DISTRIBUTOR CLAMP	1	
20	10	33231	SCREW, DISTRIBUTOR GROUND	1	
21		54094A 1	ADAPTOR HOUSING ASSEMBLY,	1	
22		54205	BUMPER, ADAPTOR HOUSING	2	
23	16	54204	STUD, ADAPTOR HOUSING TO	3	
24	37	54347	DECAL, DISTRIBUTOR CAP	1	
25	10	25876	SCREW, ADAPTOR HOUSING TC	2	
26	13	26996	LOCKWASHER, HOUSING AND F	3	
27		54986A 1	RETAINER ASSEMBLY, SPARK P	1	
27		54986A 2	RETAINER ASSEMBLY, SPARK P	1	
28	16	54459	STUD, RETAINER TO COVER	2	
29		54206	INSERT, LOWER RETAINER	1	
30	10	48591	SCREW, LOWER RETAINER TO,	1	
31		54987A 1	RETAINER ASSEMBLY, SPARK P	1	
31		54987A 2	RETAINER ASSEMBLY, SPARK P	1	
32		54095A 1	COVER ASSEMBLY, DISTRIBUTOR	1	
33	11	45812	NUT, ADAPTOR HOUSING AND F	5	
34		54380A 1	CABLE ASSEMBLY, HIGH TENSIC	1	
34		54381A 1	CABLE ASSEMBLY, HIGH TENSIC	1	
34		54380A 4	CABLE ASSEMBLY, HIGH TENSIC	1	
34		54380A 2	CABLE ASSEMBLY, HIGH TENSIC	1	