



14034

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		862031T	ALTERNATOR ASSEMBLY (65 AMP)	1	(NON-SERVICEABLE)	
2	11	40021	NUT, (M6)	1		
3	10	40001134	SCREW, (M8 x 25)	1		
4	10	828213	SCREW, (.312-18 x 1.500)	2		
5	12	57792	WASHER	2		
6	11	26484	NUT, (.312-18)	2		
7		862055T	BRACKET, Alternator Mounting	1		
8	10	98261	SCREW, (.375-16 x .750)	3		
9		860065A	BRACKET KIT, Oil Bottle	1		
10	10	98261	SCREW, (.375-16 x .750)	6		
11	11	32219	NUT, (.375-16)	2		
12		862056T	BRACKET	1		
13		862083T	BRACKET, Idler Adjustment	1		
14		818380T	BUSHING	1		
15	11	817618	NUT, (.437-20)	1		
16	43	818381	PINION STUD	1		
17		807757T	PULLEY	1		
18	10	34353	SCREW, (.375-16 x 1.00)	2		
19		862082T	BRACE, Power Steering	1		
20	10	40001188	SCREW, (M10 x 20)	1		
21		862123T	BRACKET-ALTERNATOR BRACE	1	(ALPHA)	
22	11	29250	NUT, (.312-24)	1	(ALPHA)	
23		862084T	BRACKET, Idler	1	(BRAVO)	
24	11	32219	NUT, (.375-16)	2	(BRAVO)	
25		862085T	BRACE, Idler Bracket	1	(BRAVO)	
26	16	860102	STUD, (.375-16 x 1.730)	2	(BRAVO)	
27		818382	PULLEY	1	(BRAVO)	
28		818380T	BUSHING	1	(BRAVO)	
29	10	56393	SCREW, (.437-20 x 1.75)	1	(BRAVO)	
30	11	817618	NUT, (.437-20)	1	(BRAVO)	