


Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-	84	860223A 2	WIRING HARNESS, Engine	1	SN# 0L012009 THRU 0L359999	
-	84	861819T 1	WIRING HARNESS, Engine	1	SN# 0L360000 THRU 0L618999	
-	84	862179T 1	WIRING HARNESS, Engine	1	SN# 0L619000 & Up	

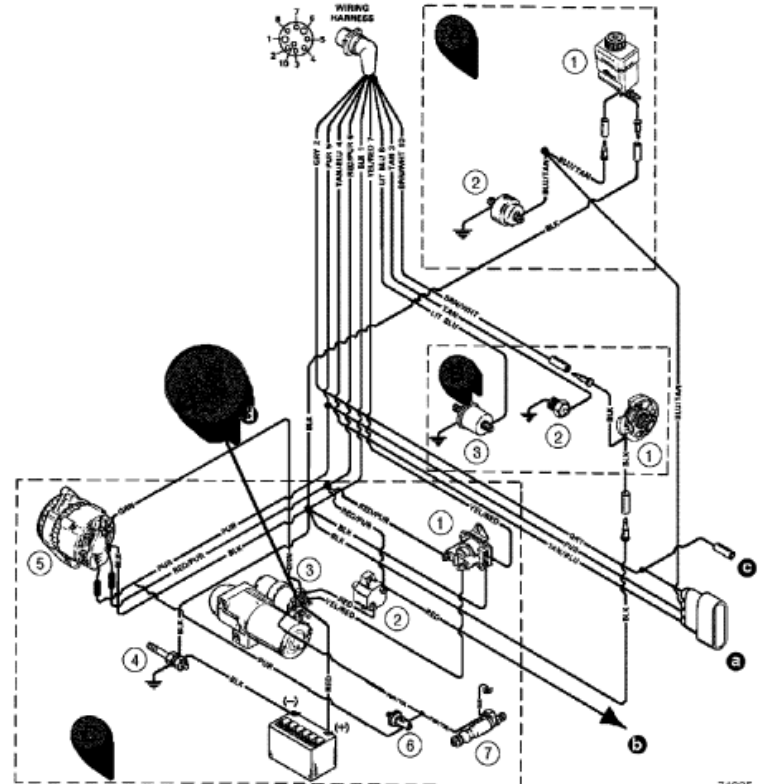

- A- Audio Warning System**
 1 - Drive Unit Oil Level
 2 - Oil Pressure Switch
- B- Instrumentation System**
 1 - Trim Sender
 2 - Water Temperature Sender
 3 - Oil Pressure Sender
- C- Charging and Starting System**
 1 - Starter Slave Solenoid
 2 - Circuit Breaker
 3 - Starter
 4 - Ground Stud
 5 - Alternator
 6 - Oil Pressure Cut-Off Switch
 7 - Fuel Pump
- a - Harness Connector to EFI System Harness
 b - Positive (+) Power Wire to EFI System Harness
 c - Auxiliary Tachometer Lead
 d -90 Amp Fuse (DO NOT Remove)

74925