



A = SEE "STARTER MOTOR AND ALTERNATOR" SECTION, REF. #18

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		16792A 1	PUMP ASSEMBLY-Power Steering	1		
2	16	41877	STUD	2		
3	36	95805	CAP	1		
4		73873A 1	PULLEY	1		
5		15082T	BRACE	1		
6	10	40001192	SCREW (M10 x 25)	1		
7	10	40001188	SCREW (M10 x 20)	1		
8	13	40024 8	LOCKWASHER (M10)	2		
9	23	72057	SPACER	4		
10	12	28105	WASHER	1		
11	11	90517	NUT	2		
12	23	45353	SPACER	1		
13	57	816295T	V-BELT	1		
14	32	806222 16	PRESSURE HOSE	1	(FITTINGS ON BOTH ENDS)	
15	25	89879	O-RING	1		
16	25	806232	O-RING	1		
17	32	806221 42	RETURN HOSE	1	(FITTING ON ONE END)	
18	25	89879	O-RING	1		
19	32	52519 14	HOSE-Pump to Oil Cooler	1		
20	54	815504105	CLAMP	3		