



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	50	99418A 2	STARTER ASSEMBLY	1	6
1		75666	HOUSING ASSEMBLY	1	
2	23	33369	BUSHING-Drive End Housing	1	
3		814474	COLLAR-Thrust	1	
4	53	33290	RING-Retaining-Pinion Stop Colla	1	
5		33291	COLLAR-Pinion Stop	1	
6		79205	DRIVE ASSEMBLY-Clutch	1	
7		79396	PLATE-Bearing	1	
8	23	71694	BUSHING-Bearing Plate	1	
9	12	68614	WASHER-Bearing Plate	1	
10	10	79209	SCREW-Bearing	2	
11		75665	ARMATURE	1	
12		NSS	SHOE-Pole-Field Coil	4	(Delco Remy #810601) 3
13		NSS	SCREW	4	(Delco Remy #1968396) 3
14		NSS	GROMMET-Field Coil	1	(Delco Remy #1846097) 3
15		75664	FIELD COIL ASSEMBLY	1	
16	12	33258	WASHER-Leather-Commutator E	1	
17		79211	FRAME-Commutator End	1	
18		NSS	BOLT-Thru	1	(Delco Remy #1941111) 3
19		NSS	BOLT-Thru	1	(Delco Remy #1939970) 3
20		33284	HOLDER-Insulated-Field Frame B	2	
21		33283	HOLDER-Field Frame Brush Grou	2	
22		33270	BRUSH-Field Frame	4	
23		22	SCREW-Brush Lead	2	(Delco Remy #1967747) 3
24		22	SCREW-Brush Lead	2	(Delco Remy #443527) 3
25		33294	SUPPORT	2	
26	24	33285	SPRING-Field Frame Brush	4	
27		25	PIN-Dowel	1	(Delco Remy #1985696) 3
28		26	LEVER-Shift	1	
29		27	STUD-Shift Lever	1	(Delco Remy #1945804) 3
30	53	33354	RING-Retaining-Stud	1	
31		33317	PLUNGER-Shift Lever	1	
32	17	79207	PIN-Plunger to Shift Lever	1	
33	24	46889	SPRING-Plunger Return	1	
34		32	SCREW	2	(Delco Remy #9413260) 3
35	89	18080	SOLENOID	1	