



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		12675A	FLYWHEEL HOUSING	1		
2		99297A	1 MOUNT, RUBBER - FLYWHEEL	2		
3	23	99322	SPACER, RUBBER MOUNT - F	2		
4	10	37612	SCREW, FLYWHEEL HOUSING A	4		
4	10	64900	SCREW, FLYWHEEL HOUSING A	1		
5	16	64066	STUD, FLYWHEEL HOUSING AT	1		
6	11	32219	NUT, FLYWHEEL HOUSING ATT	1		
7	13	35048	LOCKWASHER, FLYWHEEL HOU	6		
8	12	20572	WASHER, FLYWHEEL HOUSING	1		
9	54	78945	"J" CLAMP, FLYWHEEL HOUSING	1		
9	54	92850	CLAMP	2		
10		13930A	3 COVER ASSEMBLY	1		
11	27	96274	GASKET, FLYWHEEL HOUSING	1		
12	10	32773	SCREW, COVER TO FLYWHEEL H	7		
13	84	62826A	6 WIRE, FLYWHEEL HOUSING STL	1		