



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	99418A 2	STARTER MOTOR ASSEMBLY	1		
2	10	94435	SCREW, STARTER MOTOR (4-21)	2		
3		89057	BRACE, STARTER MOTOR	1		
5	11	72008	NUT, BETTERY TERMINAL (1/4-2)	1		
5	11	15874	NUT, BETTERY TERMINAL (10M)	1		
6	10	35765A 1	SCREW, BRACE TO ENGINE (5/8)	1		
7	13	26995	LOCKWASHER, STARTER TERM	2		
8	11	26419	NUT, SOLENOID SWITCH TERM	2		
8	11	40021 1	NUT, SOLENOID SWITCH TERM	2		
9	85	79695	BOOT, INSULATOR - STARTER T	1		
10		92497A 3	ALTERNATOR	1		
11	13	26996	LOCKWASHER, ALTERNATOR TI	1		
12	11	79989	NUT, ALTERNATOR TERMINAL (	1		
13	13	21272	LOCKWASHER, ALTERNATOR TI	1		
14	11	64015	NUT, ALTERNATOR TERMINAL (	1		
15		85013	BRACE, ALTERNATOR ADJUSTI	1		
16	10	47462	SCREW, ALTERNATOR BRACE	1		
17	13	32993	LOCKWASHER, ALTERNATOR BI	1		
18	132	31263	WASHER, ALTERNATOR BRACE	1		
19	10	29198	SCREW, ALTERNATOR BRACE (	1		
20	12	26168	WASHER, ALTERNATOR BRACE	1		
21		57908 11	TUBING, ALTERNATOR LEADS	2		
22	12	96457	WASHER, ALTERNATOR ATERM	1		
23		47487A 2	BRACKET, ALTERNATOR	1	WITHOUT POWER STEERING	
24	10	34353	SCREW, ALTERNATOR BRACKE	2	WITHOUT POWER STEERING	
24	10	64900	SCREW, ALTERNATOR BRACKE	1	WITHOUT POWER STEERING	
25	13	35048	LOCKWASHER, ALTERNATOR BI	3	WITHOUT POWER STEERING	
23		96116A 1	BRACKET, ALTERNATOR	1	WITH POWER STEERING	
24	10	37612	SCREW, ALTERNATOR BRACKE	1	WITH POWER STEERING	
24	10	34354	SCREW, ALTERNATOR BRACKE	2	WITH POWER STEERING	
25	13	35048	LOCKWASHER, ALTERNATOR BI	3	WITH POWER STEERING	
26	10	48308	SCREW, ALTERNATOR (3-3/4")	1	WITH POWER STEERING	
27	12	20553	WASHER, ALTERNATOR BRACK	2		
28	23	33186	BUSHING, ALTERNATOR BRACK	1		
29	11	23161	NUT, ALTERNATOR BRACKET SI	1		