



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		90747A27	DISTRIBUTOR	1		1
1		805185A26	DISTRIBUTOR	1		6
2		805759A 2	CAP	1		
3	10	90926	SCREW	4		
4	27	805760	GASKET	1		
5		13524A 1	ROTOR/SENSOR WHEEL	1		
6	87	91019A 3	SENSOR ASSEMBLY	1		1
7	87	91019A 6	SENSOR ASSEMBLY	1		6
8	10	47618	SCREW	1		
9	12	27736	WASHER	2		
10	43	818807	DRIVE GEAR	1		
11	17	47617	PIN	1		
12	12	90931	WASHER	1		
13	27	34486 3	GASKET	1		4,5
14		52185	CLAMP	1		
15	10	806681	SCREW	1		
16	11	68219	NUT	2		
17	84	816608A61	SPARK PLUG WIRE KIT	1		
18	33	59571	SPARK PLUG	8		
19		54676	RETAINER (2 WIRE)	2		
20		32783	RETAINER (3 WIRE)	2		
21		32784	RETAINER (4 WIRE)	2		
22	392	805570A 2	IGNITION COIL	1		
23		77294T	BRACKET	1		1
23		65970T 1	BRACKET	1		6
24	10	41408	SCREW (1-1/2 IN.)	1		
25	13	26996	LOCKWASHER	2		
26	11	68219	NUT	2		
27	10	98261	SCREW (3/8-16 X 3/4 IN.)	2		1
27	10	92913	SCREW (7/16-14 X 3/4 IN.)	1		6
28	16	90096A 1	STUD ASSEMBLY	2		
29	54	72821	RETAINER	2		
-	27	811547A92	GASKET SET-OVERHAUL	1	(7.4L BRAVO)	
-	27	811572A92	GASKET SET-OVERHAUL	1	(454 MAGNUM)	